Manual Supplement

Manual Title:BT521 UsersSupplement Issue:3Print Date:May 2014Issue Date:9/19Revision/Date:1, 7/15Page Count:3

This supplement contains information necessary to ensure the accuracy of the above manual.



BT521 Users Manual Supplement

Change #1, 312, 314

On page 1-5, under Warning, add:

Do not short the battery terminals together.

On page 1-7, in the Symbols table, add:



This product contains a Lithium-ion battery. Do not mix with solid waste stream. Spent batteries should be disposed of by a qualified recycler or hazardous materials handler per local regulations. Contact your authorized Fluke Service Center for recycling information.

Change #2, 688, 721

Replace page 7-7, *Parts and Accessories*, with:

Parts and Accessories

Table 7-1 lists the user-replaceable parts and accessories. To order replacement parts or additional accessories, contact your nearest Fluke Service Center. Check with your local vendor for list of parts that can be ordered in your country. See the "Contact Fluke" section.

Table 0-1. Parts and Accessories

Item No.	Description	Fluke Part Number	Quantity
1)	BTL10, Basic Test Lead	4542264	1
2	TL175, TwistGuard™ Test Leads	3521976	1
3	BTL_A, Voltage/Current Probe Adapter	4542258	1
4	BTL21, Interactive Test Probe set, with extender and temperature sensor	4542286	1
(5)	i410, AC/DC Current Clamp	617727	1
6	BP500, 7.4 V 3000 mAh Lithium-ion battery	4398817	1
7	BC500, 18 V dc charger with power cord and international connector set	4542299	1
8	Standard mini-b USB cable (cable length: 1 m)	4499448	1
9	BCR, Zero calibration board	4497419	1
10	Shoulder strap	4462888	1
(1)	Belt strap	4490316	1
(12)	Magnetic plate	4329190	1
13	C500L Soft carrying case, large	4497130	1
14)	Spare fuse	943121	2
(15)	Paper battery tags	4499453	100
(16)	Safety Sheet	4453942	1
(17)	Warranty card	2396000	1
(18)	Quick Reference Guide	4453956	1

9/19 1

Manual Supplement BT521 Users

19	FlukeView® Battery (CD) containing USB driver and manuals in all languages	4529552	1
20	BT-500 Probe-Tip, Replacement Probe tips with Red covers	4397118	2
21)	BT-500 Probe-Tip, Replacement Probe tips with Black covers	4397107	2
22	BT-500 Probe-Tip, Replacement Probe tips connector	4408615	2

Change #3, 721


On page 1-3, replace **Table 1-1. Standard Equipment**, with:

Item No.	Description	Quantity
1)	Mainframe	1
2	BTL10, Basic Test Lead	1
3	TL175, TwistGuard™ Test Leads	1
4	BTL_A, Voltage/Current Probe Adapter	1
(5)	BTL21, Interactive Test Probe set, with extender and temperature sensor	1
6	i410, AC/DC Current Clamp	1
7	BP500, 7.4 V 3000 mAh Lithium-ion battery	1
8	BC500, 18 V dc charger with power cord and International connector set	1
9	Standard mini-b USB cable (cable length: 1 m)	1
10	BCR, Zero calibration board	1
11)	Shoulder strap	1
(12)	Belt strap	1
(13)	Magnetic plate	1
(14)	C500L Soft carrying case, large	1
(15)	Spare fuse	2
(16)	Paper battery tags	100
17	Probe-Tip, Replacemnet Probe tips with covers.	1
	Safety Sheet, not shown	1
	Warranty card, not shown	1
	Quick Reference Guide, not shown	1
	FlukeView® Battery (CD) containing USB driver and manuals in all languages, not shown	1



2 9/19 BT521 Users Manual Supplement

On page 1-4, replace **Figure 1-1. Standard Equipment**, with:

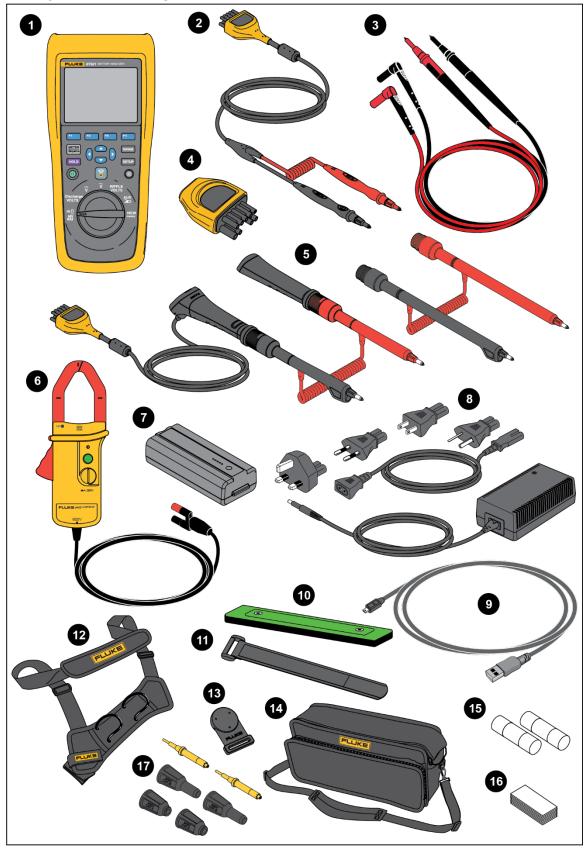

9/19 3