NEXTEK CONTROLS

Automation & Controls Product Group of SVF Flow Controls, Inc.

NEXUS-LX™ ATEX Limit Switch Box

NEXUS-LX™

WIRING DIAGRAMS FOR OPTIONAL SWITCHES & SENSORS

NOTE: These wiring diagrams cover all voltages of all Pilot Valves.
Check the coil rating and product part number before energizing coil.

Wiring Diagram# WDNX2M50

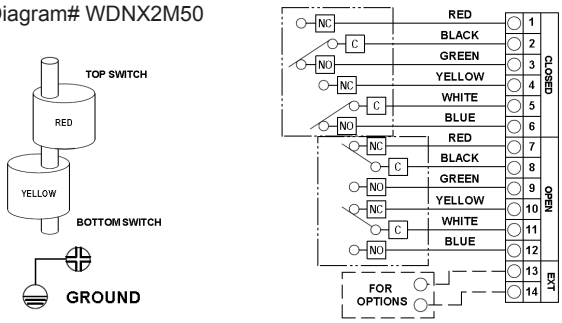

M50 = Mechanical Switches 2 DPDT

Wiring Diagram# WDNX2Q30

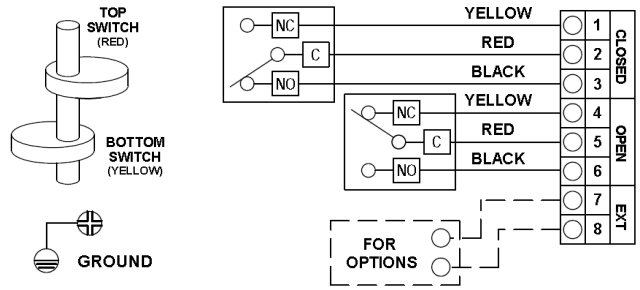

Q30 = Proximity Sensors NC (3-Wire) Magnetic Sensors

Wiring Diagram# WDNX2P20

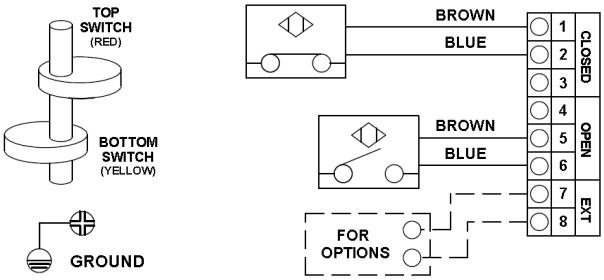

P20 = Proximity Sensors NO (2-Wire) Inductive Sensors

Wiring Diagram# WDNX2P3A

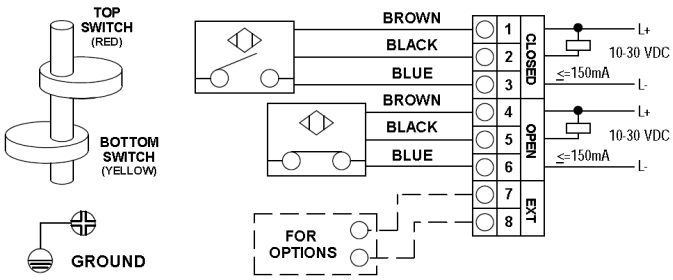

P3A = Proximity Sensors NPN NC (3-Wire) Inductive Sensors

Wiring Diagram# WDNX2PP0

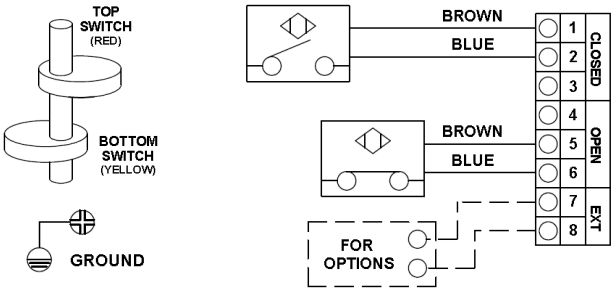

PP0 = Proximity Sensors NC (2-Wire) Inductive Sensors

Wiring Diagram# WDNX2P3B

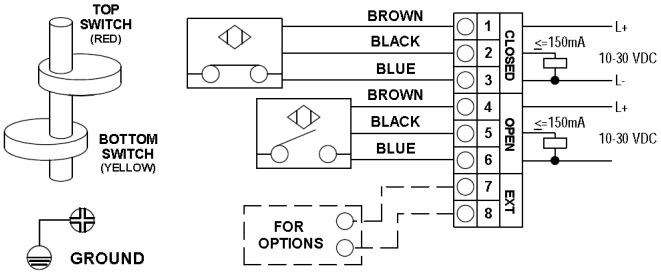

P3B = Proximity Sensors PNP NO (3-Wire) Inductive Sensors

Wiring Diagram# WDNX2P30

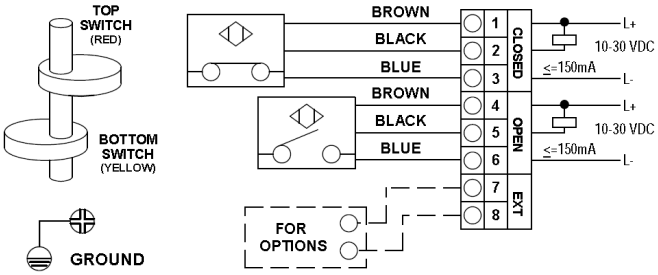

P30 = Proximity Sensors NPN NO (3-Wire) Inductive Sensors

Wiring Diagram# WDNX2P3C

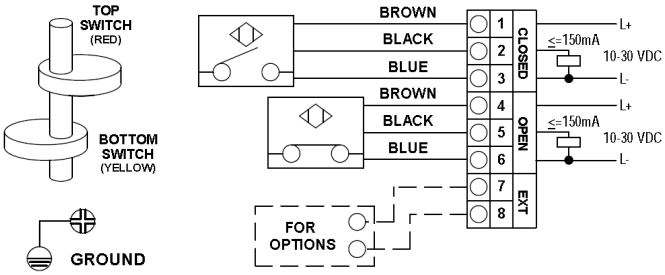

P3C = Proximity Sensors PNP NC (3-Wire) Inductive Sensors

© SVF Flow Controls, Inc. • 13560 Larwin Circle • Santa Fe Springs, CA 90670 • Tel: 1.800.783.7836 • FAX: 562.802.3114
Sales@NextekControls.net • Specifications subject to change.