


# Proportional Technology

Precise Control of Pressure and Flow



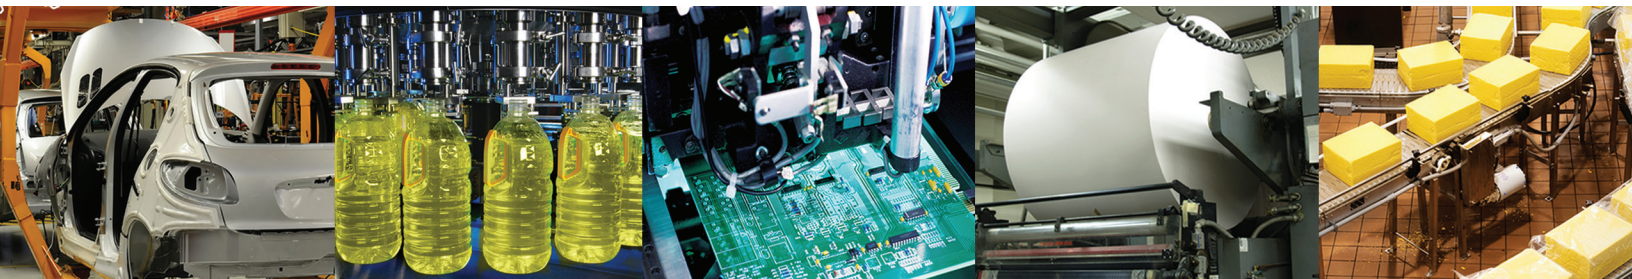

## Introduction to Control Technology

Glossary of Terms	2
Control Systems/Control Methods	4
Types of Controllers	5

## Applications for Proportional Valves

For Economical Quality and Control	6
Application Examples	7

## Selection of Proportional Valves

Technical Characteristics	10
Choice of Equipment	11

## Pressure Control

608/609 Series Sentronic <sup>D</sup>	12
614 Series Sentronic <sup>PLUS</sup>	19
614 Sentronic <sup>PLUS</sup> IO-Link CLASS A	25
616 Series Sentronic <sup>HD</sup>	29
617 Series Sentronic <sup>LP</sup>	33
617 Sentronic <sup>PLUS</sup> LP IO-Link CLASS A	39
615 Series Servotonic <sup>Digital</sup>	44

## Flow Control

607 Series Flowtronic <sup>D</sup>	49
------------------------------------	----


## Accessories

603 Series Control <sup>D</sup>	54
---------------------------------	----




## Symbols and Terminology

### Glossary of Terms

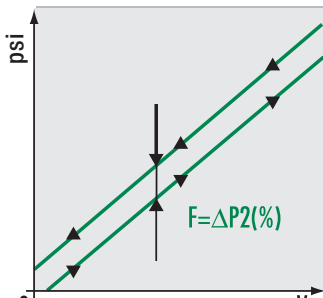


#### Hysteresis

Hysteresis is the tolerance of the outlet pressure for a given command signal depending on whether the previous pressure was higher or lower.

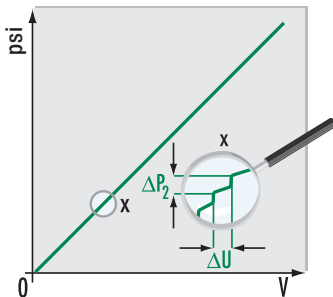


#### Sensitivity

The smallest change in command signal which leads to a change in the outlet pressure is called sensitivity. Expressed as a percentage of the maximum outlet pressure.

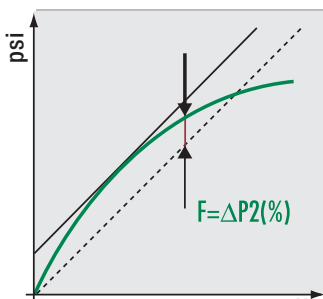

#### Linearity

The ideal relationship between command signal and outlet pressure is linear, and when plotted results in a straight line (dotted line). Linearity is a measure of the maximum deviation between the actual outlet pressure and commanded pressure.

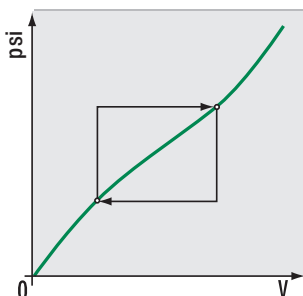

#### Repeatability

Repeatability is the tolerance of the outlet pressure for the same command signal given multiple times.

### Symbols



Pressure  
Sensor



Force  
Sensor



Distance  
Sensor




Angle  
Sensor




Flow  
Sensor



Temperature  
Sensor

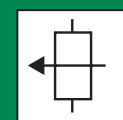


Potentiometer

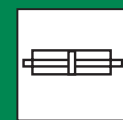

Cylinder




## Symbols



Trimming  
Potentiometer



Electrical  
Switch




Digital  
Display



Analog  
Display



Tachometer  
Generator



Proportional  
Valve




Voltage/  
Current  
Selector



Digital-to-  
Analog  
Converter


## Zero Adjustment

The pressure or flow that corresponds with the lowest command signal.

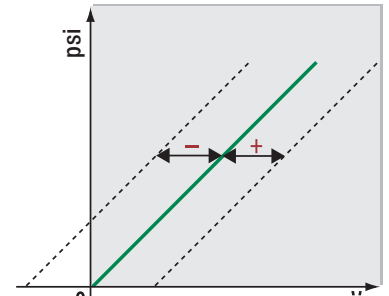


## Span Adjustment

The valve's output pressure or flow range can be reduced to match the application's needs, providing the highest possible resolution.

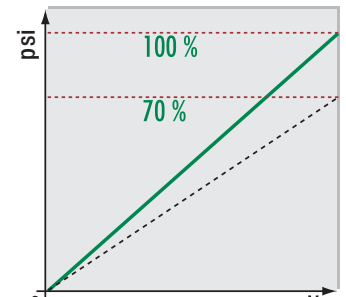

## Ramp Function

The ramp function transforms a command signal step into an internal gradual increase. This allows slow opening and closing of proportional valves.

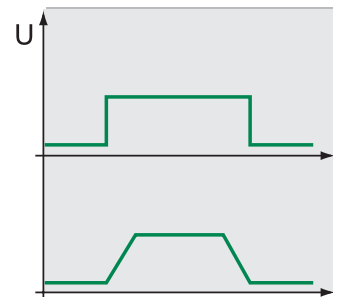

## Ripple Frequency

Modulation voltage to minimize friction (slip-stick) in a valve.

## Feedback Value

Actual electrical value of a physical variable. (Pressure, force, temperature, flow, etc.)

## Control Systems

Within industrial automation, the goal of a control system is to move a physical variable such as temperature, pressure, force or displacement to a predetermined value. The complexity of the system, impact of external variables and required accuracy will dictate whether the control system needs some type of feedback measurement in order to ensure that the desired value (or setpoint) is reached. The difference between open-loop and closed-loop control is that the feedback allows the control system, or control loop, to compare the output to the commanded value and adjust as needed.

### Open-Loop Control

An example of an open control loop is a timer for a sprinkler system. When the timer is activated, the sprinkler goes on for a set amount of time. This is open-loop control because the system does not monitor, for instance, the moisture content of the soil. The system will turn the sprinklers on in the middle of a rainstorm. The desired outcome of the controlled action is not monitored.

An open sequence of actions where there is no comparison of the end result to the desired result is the primary characteristic of open-loop control.




Open-Loop Control

### Closed-Loop Control

In a closed loop, the desired value or setpoint is constantly compared to the actual value. DIN standard 19226 defines the terms “Control and Adjustment” as follows: “Control and adjustment is an operation in which a physical variable (e.g. temperature, pressure etc.) is continuously measured and compared to a previously specified value of the variable with the aim of matching the two. The resulting closed sequence of actions occurs in a closed loop, the closed-control loop.”

In the example of the sprinkler system, the actual moisture content of the soil could be measured with a sensor and compared to the desired moisture level. As soon as there is a difference between the desired value and measured value, a signal can be sent to either open the water valve (if the soil is dryer than specified) or close the valve (if the soil is wetter than specified). The feedback, provided by the sensor in this case, that is used to compare and adjust the actual value to the desired value is the primary characteristic of a closed-loop system.

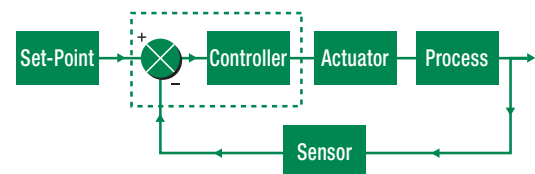


Closed-Loop Control

Types of Controllers

A controller is a transfer element which compares the feedback value received from a transducer (sensor) to a predetermined value (i.e. setpoint) and processes it in such a way that a control signal is transmitted to the actuating element (e.g. a proportional valve). The controller should control this transmission in such a way that the dynamic qualities of the controlled process are balanced. The setpoint should be reached quickly while the feedback value should fluctuate as little as possible around the setpoint.

ASCO's proportional valves use a common controller called a proportional-integral-derivative (PID) controller. The P, I and D terms can easily be modified with each product's software to achieve various types of control based upon the needs of a given application. The most basic controller is the P controller. P, PI and PID control are best suited to a wide range of applications.

The charts to the right show graphical representations of the various PID terms and the table below shows the types of controllers that are most often successful by application.

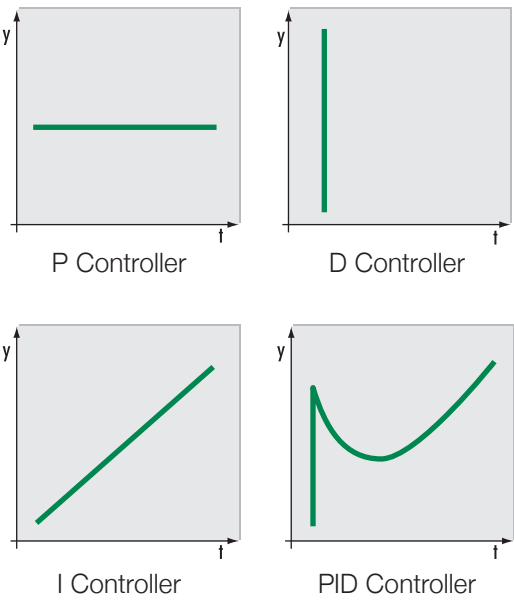


Application	Types of Controllers		
	P	PI	PID
Pressure	low profile	suitable	suitable
Flow	unsuitable	suitable	less suitable
Temperature	low profile	suitable	suitable
Level	suitable	unsuitable	unsuitable
Speed	suitable	suitable	suitable

### For Economical Quality and Control...


Proportional valves maximize production processes in many industries including food processing, textiles, industrial plant engineering, medical technology, pharmaceutical, semiconductor, and automobile. These valves create many innovative solutions when incorporated into a programmable control system. The combination of electronics and mechanics in proportional valves provides ideal performance for many industrial applications. ASCO's proportional pressure regulators and flow control valves are highly customizable to specific applications. ASCO continually develops customized components and solutions for specific customer requirements. Please do not hesitate to contact ASCO's technical support team.

#### Spot Welding

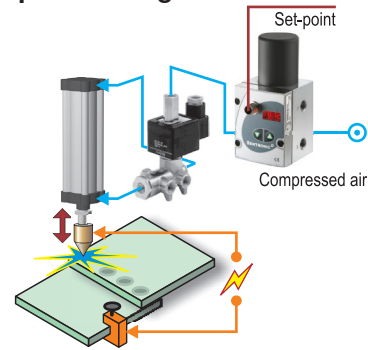


The proportional pressure regulator controls the clamping force of the welding head depending on the material to be welded and its thickness.

#### Compensation of Thickness

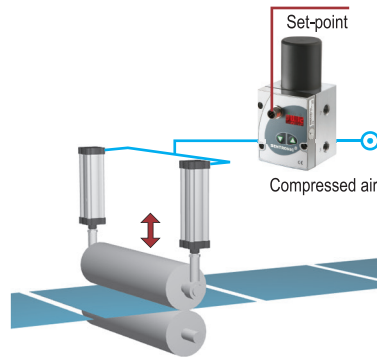


The pressure acting against the roller is controlled with a proportional pressure regulator. Different thickness in the materials is offset.

#### Servo Unit for Brakes

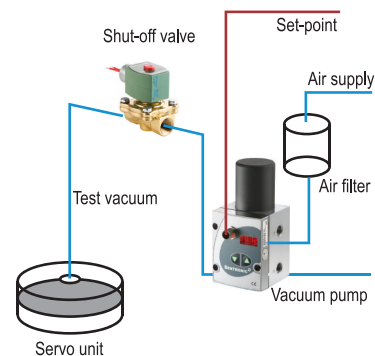

The proportional pressure regulator is incorporated in the bypass of a vacuum pump. The brake booster is checked against the setpoint.


#### Force

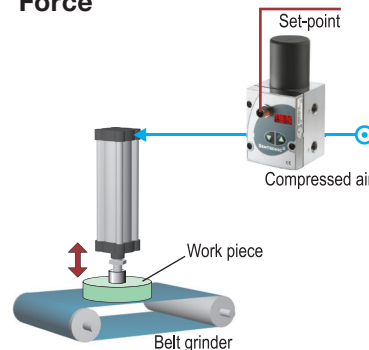

The proportional valve controls the force acting against work pieces on grinding belts, pneumatic presses etc.


## Control of Pressure and Flow

### Paint Spray Gun Application

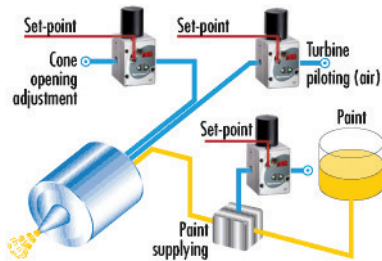


Spray gun control: Control of paint flow and spray density, and of the surface of the part of being painted.

### Glue Dosing

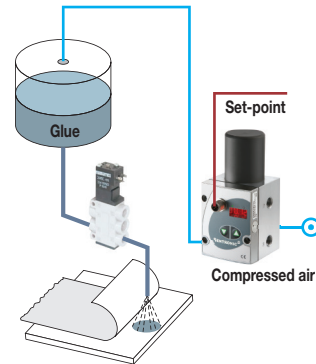


The proportional pressure regulator maintains system pressure as the level of glue in the container decreases. Glue is dosed accordingly.

### Material Testing

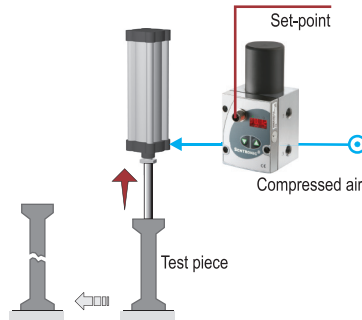


The force acting against the test piece is continuously increased until the test piece is destroyed.

### Vacuum Generation

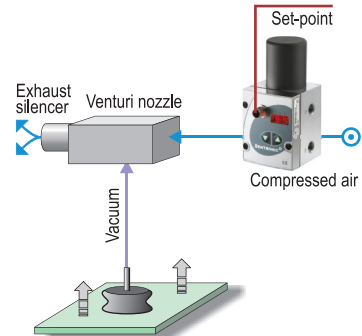


A change of pressure into the venturi nozzle via the proportional valve changes the vacuum generated.

### Fluid Coating

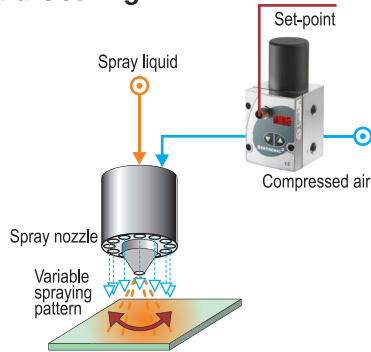


The spray pattern, i.e. the coating width, is adjusted by controlling the air supply through fan adjusting nozzles.

### Flight Simulator

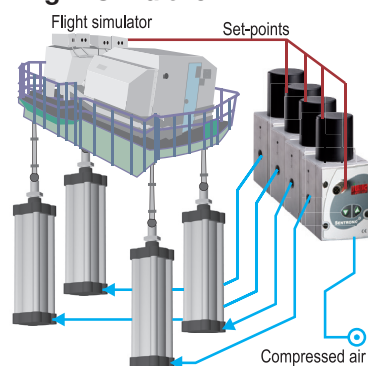


The movements of an aircraft are simulated by applying different pilot pressures to the cylinders.

### Brake Pressure

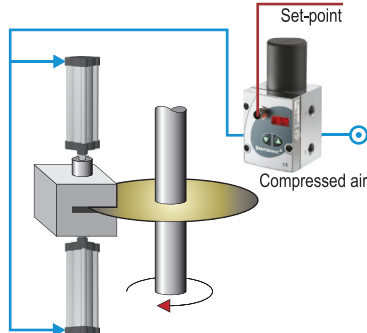

A command signal is used to gradually brake and slow down a rotating mass in accordance with the controller's speed profile.


### Leak Test

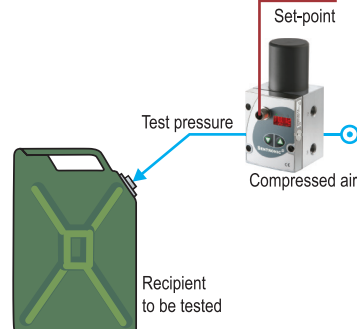

The proportional pressure regulator precisely adjusts the test pressure for different leak tests.


## Control of Pressure and Flow

### Laser Cutting

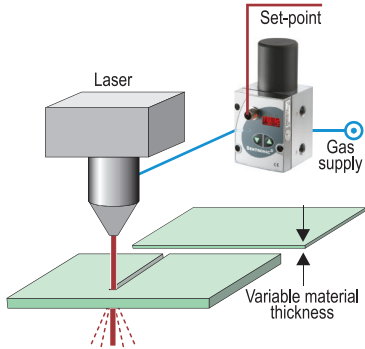


The gas pressure is adjusted in accordance with the material and its thickness.

### Ultrasonic Welding

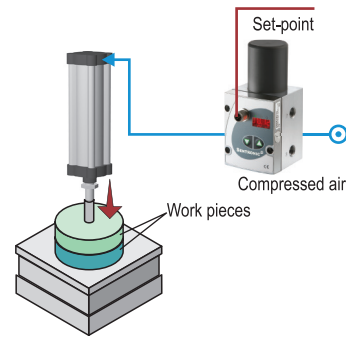


The proportional pressure regulator adjusts the frictional pressure of ultrasonic welding machines.

### Bottle Molding

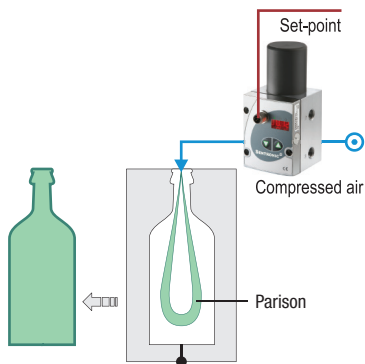

The parison is inflated at a varying rate using a proportional valve.

### Turbo-Supercharger

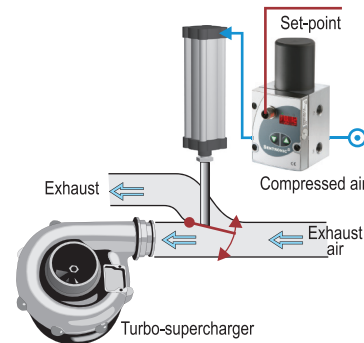


Exhaust gas flow is adjusted to the turbo-supercharger depending on the engine speed to maintain the charging pressure at a constant level.

## Dual Loop Control


Sentronic<sup>D</sup>, Sentronic<sup>PLUS</sup> and Flowtronic<sup>D</sup> can be configured for dual loop control. Process variables such as pressure, flow, force, speed, RPM, and temperature can be controlled. Dual loop control requires no additional components other than a process sensor to provide an analog feedback input.

### Control of Speed and Torque

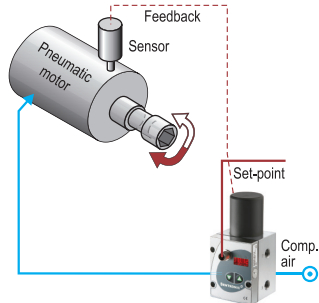


Speed and torque are controlled by changing the pilot pressure.

### Tire Making

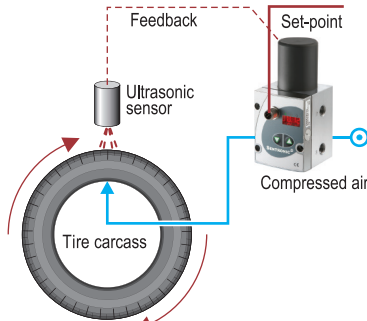


Controlled by the proportional pressure regulator with a dependence on the tire's diameter, the individual plies of the tires are built up and a constant tire quality is ensured.

### Filling Pressure

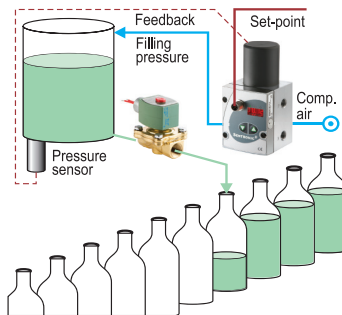


The liquid flows to the valve at a constant pressure irrespective of the fluid level in the storage tank. The filling volume remains constant.

### Flow Control

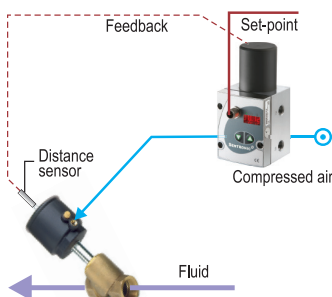


The flow of liquids is varied by continually adjusting the orifice of the fluid valve by measuring the valve's travel (distance sensor).

### Compensation of Lengths in Winding

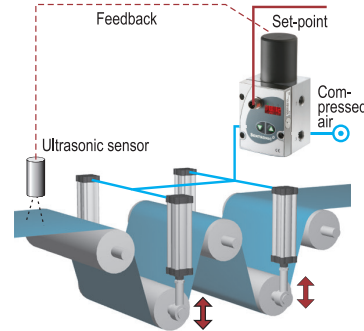


Different lengths of winding material are offset with cylinders controlled by proportional pressure regulators, which controls the tensile stress.

### Balancer

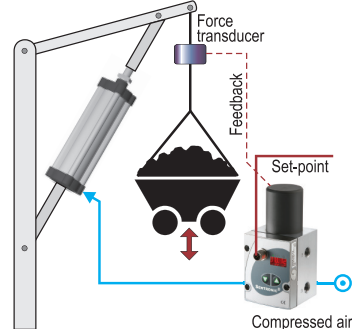


The proportional valve pneumatically balances the weight over the cylinder pressure. Heavy loads can easily be lifted and lowered by hand.

### Temperature Control

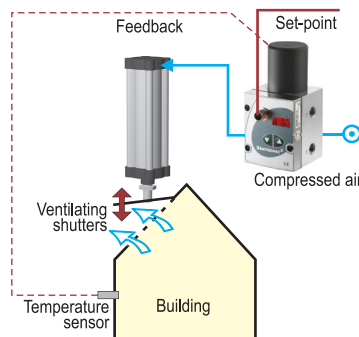

The room temperature is held at a constant level by opening or closing ventilating shutters.

### Clamping Pressure Control

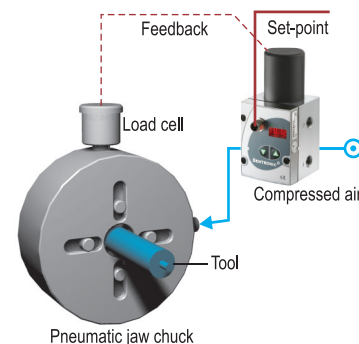

The clamping pressure of machine tools is adjusted in accordance with the tool's material (steel, synthetic material, etc.).

## Technical Characteristics



	Port size	Pressure range	Flow	Filtration	Hysteresis	Power rating	Type of construction	Loss of power behavior
<b>SENTRONIC<sup>D</sup></b>	1/8, 1/4, 3/8 NPT or GTap	0 to 150 psi 0 to 10 bar	up to 45.9 SCFM 1300 NI/min	50 µm	< 1%	21 to 40 W	Poppet valve	Pressure released
<b>SENTRONIC<sup>PLUS</sup></b>	1/8, 1/4, 1/2, 1 NPT or GTap	0 to 725 psi 0 to 50 bar	up to 198 SCFM 5600 NI/min	50 µm	< 1%	33 to 44 W	Poppet valve	Pressure released
<b>SENTRONIC<sup>HD</sup></b>	1/4 GTap	0 to 145 psi 0 to 10 bar	42 SCFM 1200 NI/min	50 µm	± 0.25 % of span	5 W	Proportional Pilot + Poppet valve	Pressure released or pressure held
<b>SENTRONIC<sup>LP</sup></b>	1/4, 3/8, 1/2, NPT or GTap	0 to 150 psi 0 to 10.2 bar	up to 185 SCFM 5200 NI/min	50 µm	< 1%	3.8 W	Pilot + Poppet valve	Pressure held
<b>SERVTRONIC<sup>Digital</sup></b>	G 3/8	0 to 580 psi 0 to 40 bar	60 SCFM 1700 NI/min	5 µm	< 0.5%	28 W	Spool-Sleeve Assembly	Pressure released
<b>FLOWTRONIC<sup>D</sup></b>	1/4, 3/8, 1/2 NPT or GTap	58 to 116 psi 4 to 8 bar	0.4 to 70 SCFM 10 to 2000 NI/min	50 µm	< 3%	33 to 44 W	Poppet valve	Pressure released





## Choice of Equipment



	Control		Fluids				Control loop		Actuation		Application		Special features
	Pressure	Flow	Vacuum	Air/neutral gases	Liquids	Steam	Open	Closed	Electrical	Air piloted	Static	Dynamic	
SENTRONIC <sup>D</sup>	●	○		●				●	●		■	▲	Digital control with or without display, controller adaptation
SENTRONIC <sup>PLUS</sup>	●	○	●	●				●	●		■	▲	Digital control with or without display, controller adaptation
SENTRONIC <sup>HD</sup>	●	○	●	●				●		●	■	▲	Alternate between 3 saved sets of control parameters
SENTRONIC <sup>LP</sup>	●	○		●				●		●	■		Low power consumption, controller adaptation
SERVTRONIC <sup>Digital</sup>	●	○		●				●	●		■	▲	Digital control, controller adaptation
FLOWTRONIC <sup>D</sup>		●		●				●	●		■	▲	Digital control with or without display, controller adaptation

■ **Static:** For applications with few setpoint changes

▲ **Dynamic:** For applications with constantly changing setpoints

● **Primary function**

○ **Secondary function**

### **Sentronic<sup>D</sup>**


Sentronic<sup>D</sup> is a digitally operated pressure regulator valve.


Sentronic<sup>D</sup> stands for:

- Digital control
- Display (integrated)
- Direct operated valve

With the Data Acquisition Software (DaS) and the RS232 interface, it's now possible to optimally adjust the valve's control parameters to a specific application. The scope function allows you to log and read the system's response in real time.


The DaS capabilities streamline the development process and identify application-specific problems at an early stage. Saved parameters can also be used for future production so that valves are factory-set to a specific application.

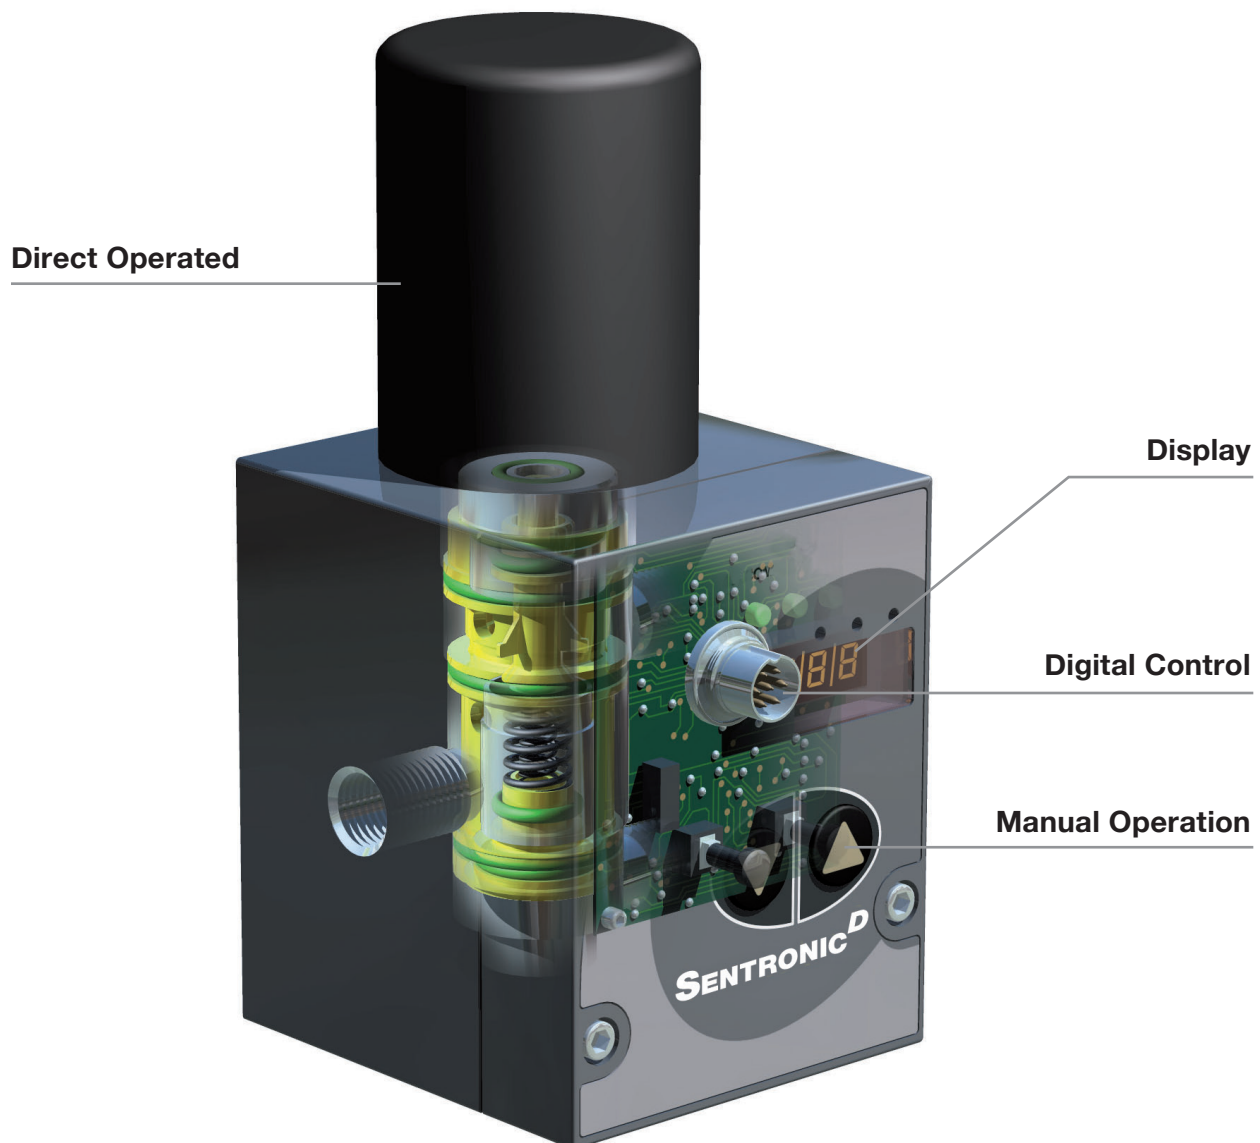

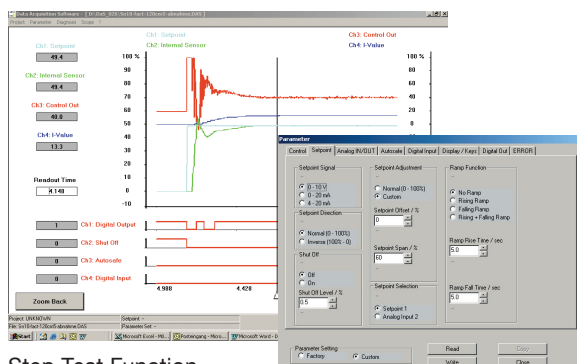

Step Test Function

Parameters Setup

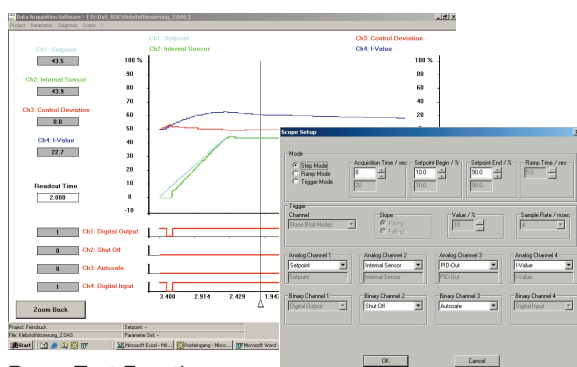


Ramp Test Function

Scope Setup

## Advantages

- Minimum hysteresis
- Quick response times
- Very high sensitivity
- Standard 50 µm filtration
- No constant air consumption
- Analog feedback output
- Easy change of control parameters
- Digital control
- Integrated display (optionally without)
- PC communication

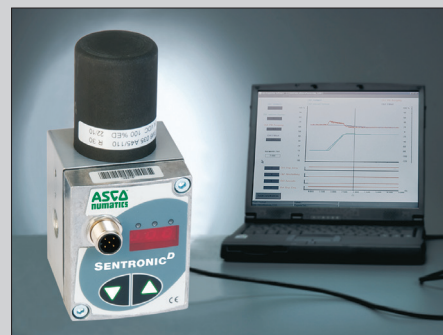

By connecting the Sentronic<sup>®</sup> to a PC with an RS232 interface, the Data Acquisition Software (DaS) can be used to optimally adjust the valve's control parameters to a specific application. DaS has an oscilloscope function that allows the user to select and visually see various response characteristics as the valve operates in an application. Control loop parameters can be adjusted using the software without removing the valve from service. This functionality streamlines the application development process. Control parameters can be saved and reloaded at any time.

The DaS software offers the following features:

- Real time display of: command signal, outlet pressure, internal control parameters (e.g. P, I or D), pressure switch signal, etc.
- Parameter setting: command signal, zero offset, span, limitation of output current, ramp function, etc.
- Diagnostics menu for error detection and testing
- Custom adjustment to an application
- Control of Sentronic<sup>®</sup>

## How to Order

### Nominal Diameter

608 = DN 4mm  
609 = DN 8mm

### Version (ports), Body

0 = G 1/8 (DN4), G 1/4 (DN 8)  
1 = G 1/4 (DN 4), G 3/8 (DN 8)  
2 = Manifold version<sup>1</sup>, G 1/4 (DN 4), G 3/8 (DN 8)  
6 = NPT 1/4 (DN 4), NPT 3/8 (DN 8)

### Pressure Range

	Max. Inlet Pressure		Max Inlet Pressure
A	= 0 – 50 psi 90 psi	1	= 0 – 10 bar 13 bar
B	= 0 – 100 psi 140 psi	2	= 0 – 12 bar 15 bar
C	= 0 – 150 psi 190 psi	3	= 0 – 3 bar 6 bar
		4	= 0 – 1 bar 2 bar
		5	= 0 – 15 bar <sup>2</sup> 16 bar
		6	= 0 – 6 bar 9 bar

Notes:

<sup>1</sup> See Accessories section for required manifold subbase.

<sup>2</sup> Only available for 608 DN 4mm size.

<sup>3</sup> Feedback input is needed for dual loop units.

608 6 C 0 1 1 1

### Options

A00 = Dual loop control  
211 = Oxygen clean

### Display

0 = without display  
1 = with display

### Digital Output

1 = Pressure switch output, PNP ± 5%

### Feedback

1 = Feedback output 0 - 10 V  
2 = Feedback output 0 - 20 mA  
3 = Feedback output 4 - 20 mA  
4 = Feedback input 0 - 10 Volt<sup>3</sup>  
5 = Feedback input 0 - 20 mA<sup>3</sup>  
6 = Feedback input 4 - 20 mA<sup>3</sup>

### Command Signal

0 = 0 - 10 V  
1 = 0 - 20 mA  
2 = 4 - 20 mA

## Sentronic<sup>D</sup>

### 1/8 to 3/8 tapped body or 1/8 - 1/4 subbase mounted body (NPT or GTap)

- Sentronic<sup>D</sup> is a highly dynamic 3-way proportional valve with digital control
- Sentronic<sup>D</sup> stands for:
  - Digital communication and control
  - Display (integrated)
  - Direct operated valve
- A special feature of the Sentronic<sup>D</sup> is its DaS software supplied for optimum adjustment via PC and viewing of command and feedback signals
- Other functions are valve diagnostics, parameter setting and maintenance
- Sentronic<sup>D</sup> can be configured for dual loop control of process variables such as flow, force, speed, RPM and temperature



Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm, condensate-free, lubricated or unlubricated	0 °C to 50 °C (32 °F to 122 °F)	Aluminum	POM (polyacetal)	NBR (nitrile) and FPM (fluoroelastomer)

General Valve Information	
Fluid Temperature	0 °C to 60 °C (32 °F to 140 °F)
Flow (Qv at 6 bar)	470 to 1300 l/min (ANR)
Command Signal	0 – 10 V (impedance 100 kΩ), 0 – 20 mA, – 20 mA (impedance 250 Ω)
Ports	1/8, 1/4, 3/8 (NPT or GTap)
Construction	Poppet Valve
Actuation	Proportional Solenoid
Hysteresis	< 1% of span
Linearity	< 0.5% of span
Repeatability	< 0.5% of span
Minimum Setpoint	100 mV (0.2 mA/4.2mA) with shut-off function
Minimum Outlet Pressure	1% of span

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
4	24 VDC = ± 10%	21	850	H	IP65	5-pin M12 connector (not supplied)
8	24 VDC = ± 10%	40	1650	H	IP65	5-pin M12 connector (not supplied)

\* Max. ripple: 10%


Specifications			
Ø Ports	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm <sup>3</sup> /h)	at 6 Bar (l/min - ANR)
1/8, 1/4 NPT or GTap	4	0.50 (0.43)	470
1/4, 3/8 NPT or GTap	8	1.39 (1.20)	1300



Dimensions: inches (mm)


**Inline version: DN 4**

Weight: 0.56kg (1.23lbs)

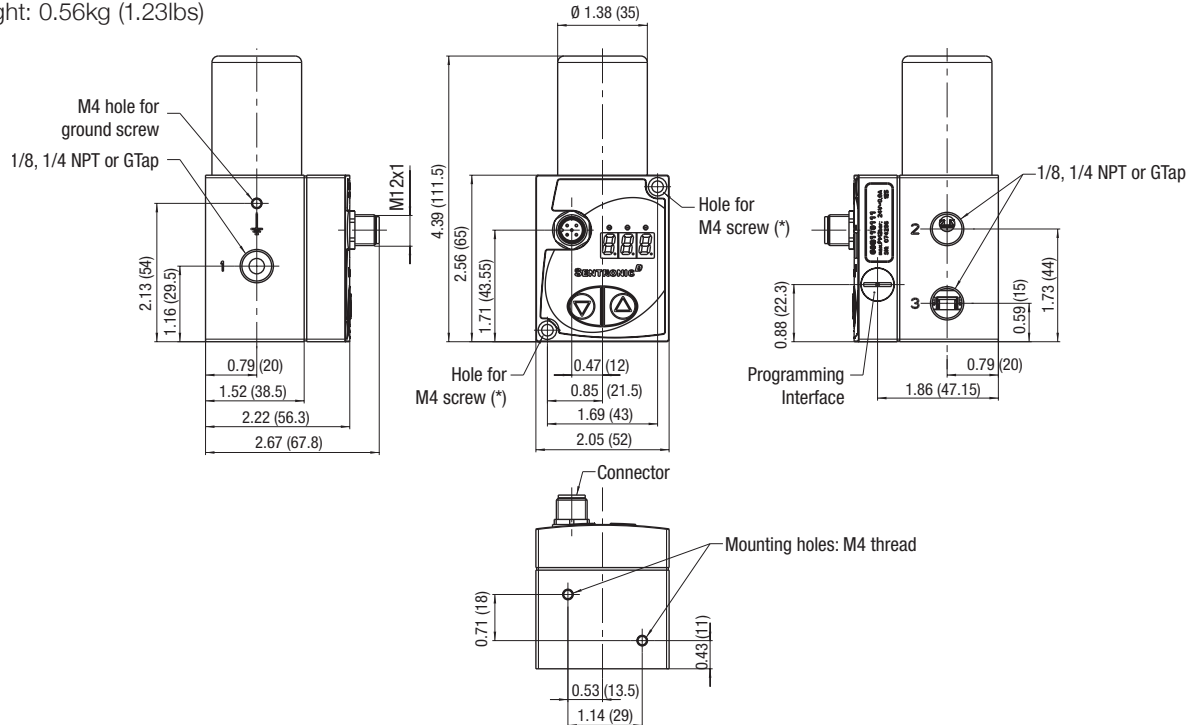

**Inline version: DN 8**


Weight: 1.13kg (2.49lbs)

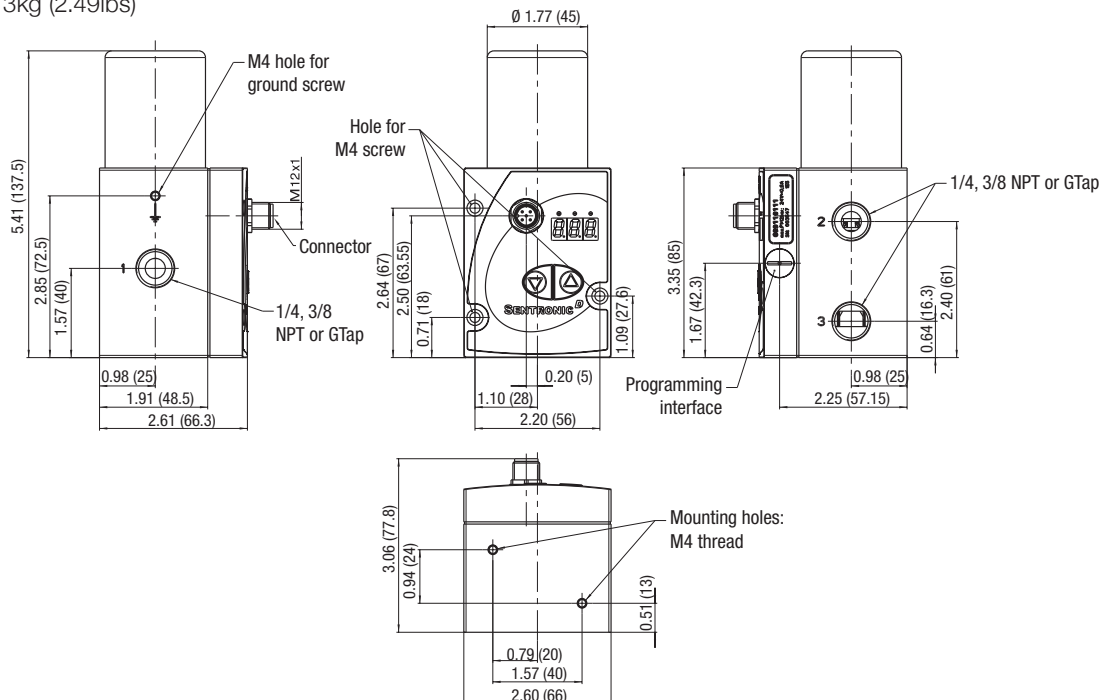


Dimensions: inches (mm)

**Manifold version: DN 4**

Weight: 0.56kg (1.23lbs)

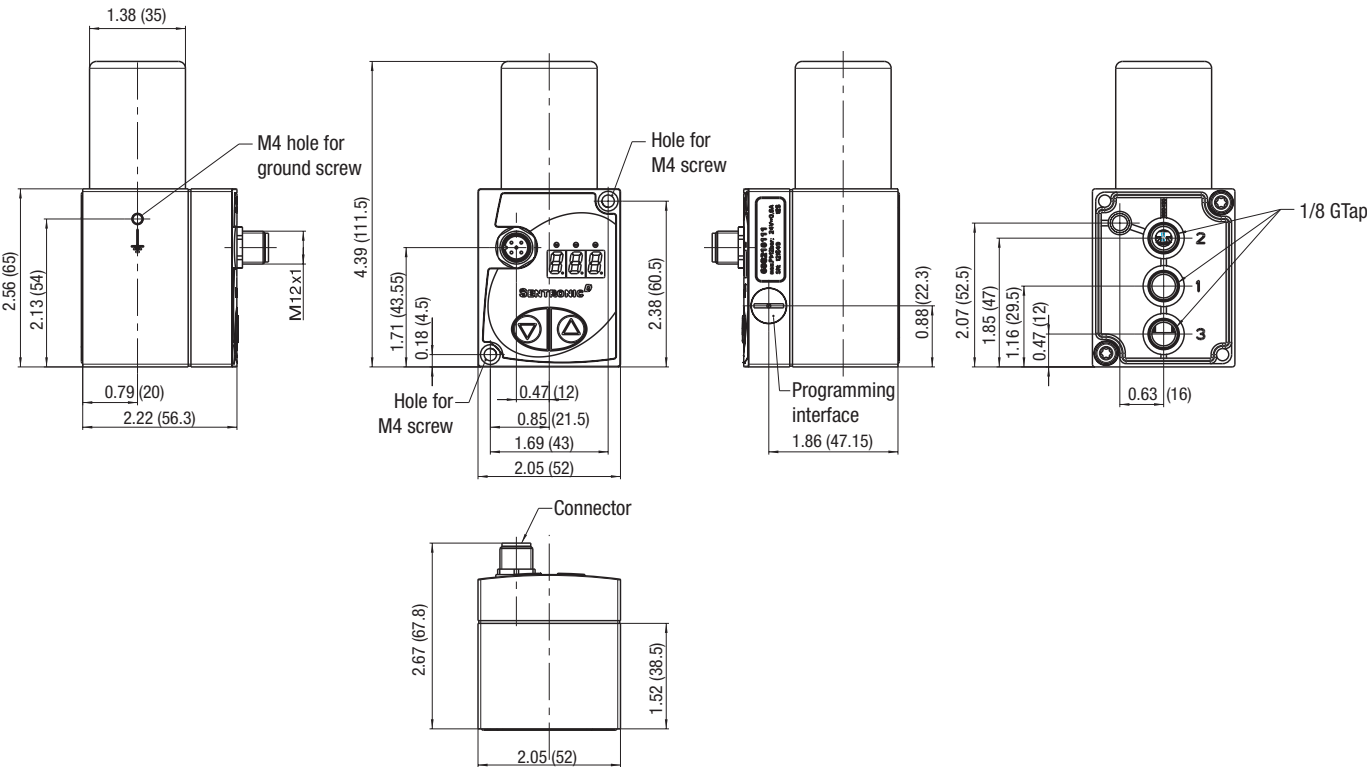


**Manifold: DN 4**

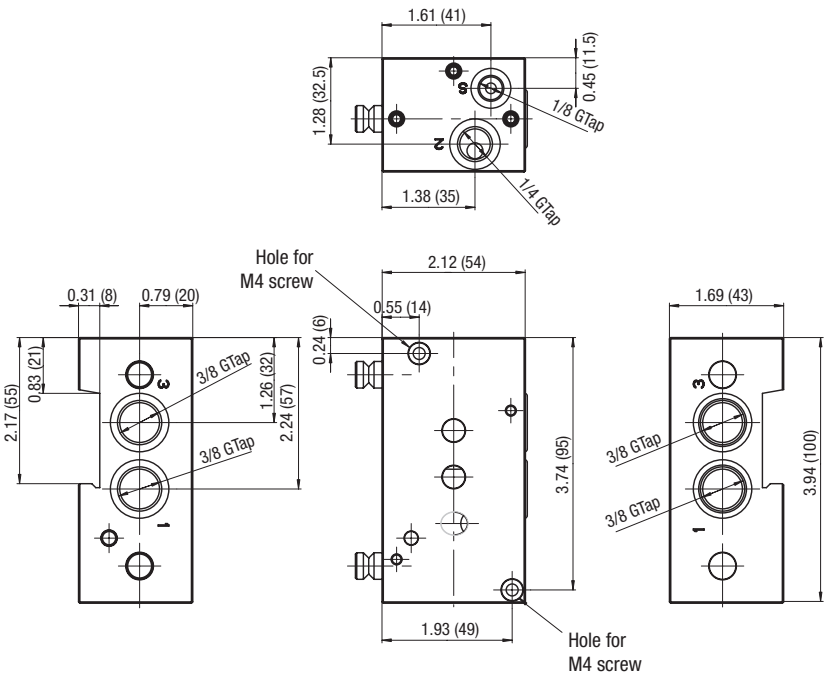


## Dimensions: inches (mm)

### Manifold version: DN 8


Weight: 1.13kg (2.49lbs)

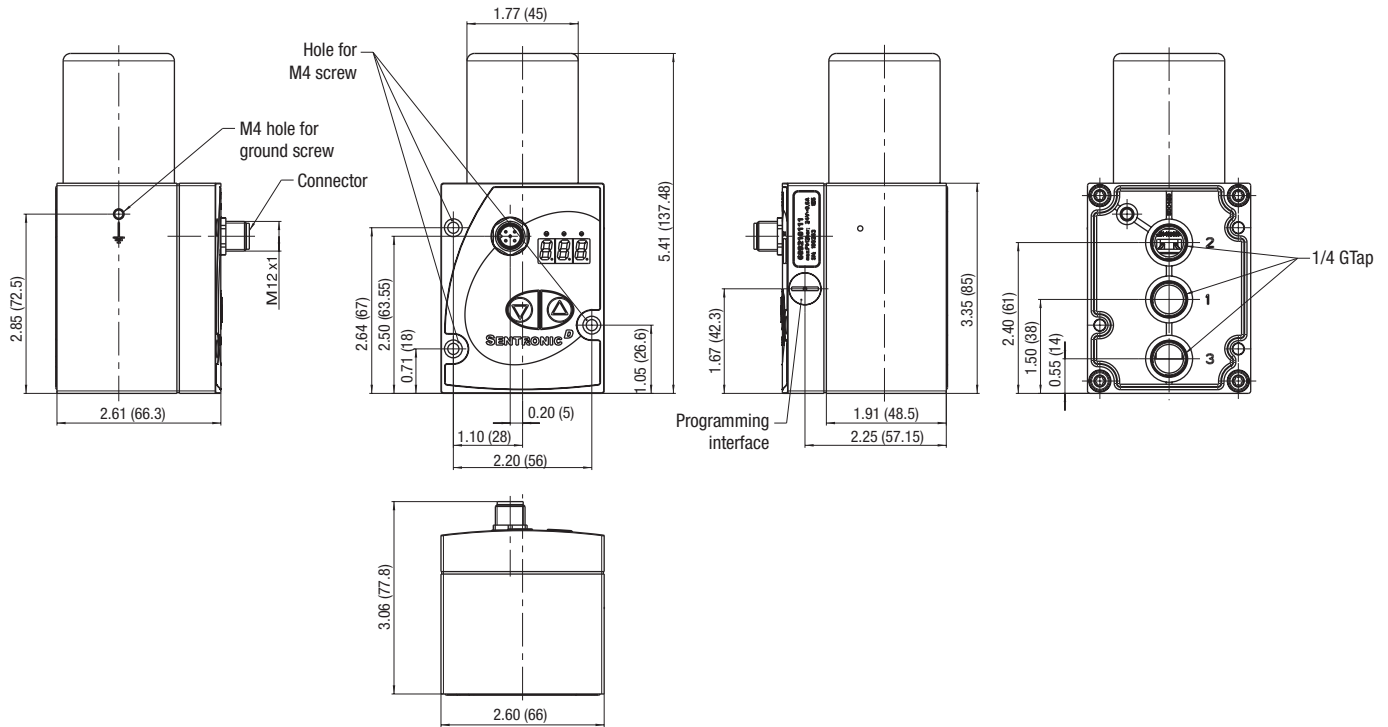

### Manifold: DN 8

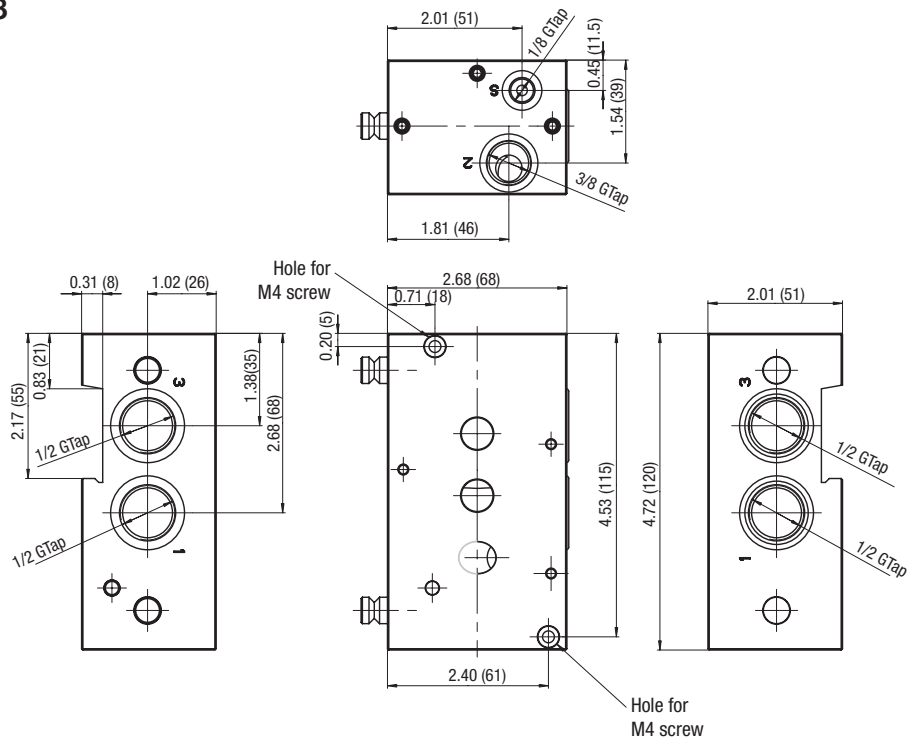

## Connector Pin Out

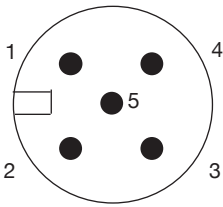

Pin	Description
1	+24 VDC Supply
2	Command Signal
3	+0 VDC Common (Supply)
	+0 VDC Common (Command Signal)*
4	Analog output (feedback)
5	Digital output (pressure switch)
Body	EMC shield

\* A 6-wire cable with separate common for the command signal is used for cable lengths over 2m to minimize the voltage drop for the command signal.

## Accessories



5 Pin 12mm FEMALE Straight Field Attachable Connectors	Model Number
PG 9 Cable Gland	TC05F20000000000

5 Pin 12mm FEMALE 90 DEGREE Field Attachable Connectors	
PG 9 Cable Gland	TD05F20000000000

Micro Female 5 Pole Straight 6 Wire 24 AWG, Shielded	
3 Meter	TC0503MMS000671Y
5 Meter	TC0505MMS000671Y

Micro Female 5 Pole 90 Degree 6 Wire 24 AWG Euro Color Code, Shielded	
3 Meter	TD0503MMS000671Y
5 Meter	TD0505MMS000671Y

Micro F/M 4 Pole Straight 22 AWG Euro Color Code	
Unshielded	Shielded
2 Meter - TC0403MIETA04000	3 Meter - TC0403MMETA04000
5 Meter - TC0405MIETA04000	5 Meter - TC0405MMETA04000

Micro F 90°/M Straight 22 AWG Euro Color Code	
Unshielded	Shielded
2 Meter - TD0403MIETA04000	3 Meter - TD0403MMETA04000
5 Meter - TD0405MIETA04000	5 Meter - TD0405MMETA04000

Manifold (individual subbases that join together)	Model Number
Manifold for 608 (DN 4mm) with G3/8; supply/exhaust and G1/4 output	35500558
Manifold for 609 (DN 8mm) with G1/2; supply/exhaust and G3/8 output	35500559

PC Software & Cable Connectors	Model Number
DaS Light: Data Acquisition Software for Sentronic <sup>D</sup> - basic parameters - free download at asco.com	99100110
DaS Expert: Data Acquisition Software for Sentronic <sup>D</sup> - full parameters	Consult Factory
RS 232 cable converter; 2m cable with 9-pin Sub-D (connector required for software usage)	88100732

<sup>1</sup> Manifold ships with required hardware and gaskets for connecting manifolds together.





### Sentronic<sup>PLUS</sup>


Sentronic<sup>PLUS</sup> is a digitally operated pressure regulator valve. This valve accurately adjusts pressure, flow, force, speed, and linear or angular positions. All orifices have the same diameter for short response times whether increasing or exhausting pressure. The valve components are designed to provide control at an extremely low hysteresis.

Sentronic<sup>PLUS</sup> regulates pressure up to 725 psi (50 bar) and can be used in potentially explosive atmospheres according to ATEX Directive 94/9/EC.

With the Data Acquisition Software (DaS) and the RS232 interface, it is now possible to optimally adjust the valve's control parameters to a specific application. The scope function allows you to log and read out the system's response in real time.

The DaS capabilities streamline the development process and identify application-specific problems at an early stage. Saved control parameters can be loaded at any time and used as a reference for maintenance and error detection. Saved parameters can also be used for future production so that valves are factory-set to a specific application.

#### Actuating Solenoid

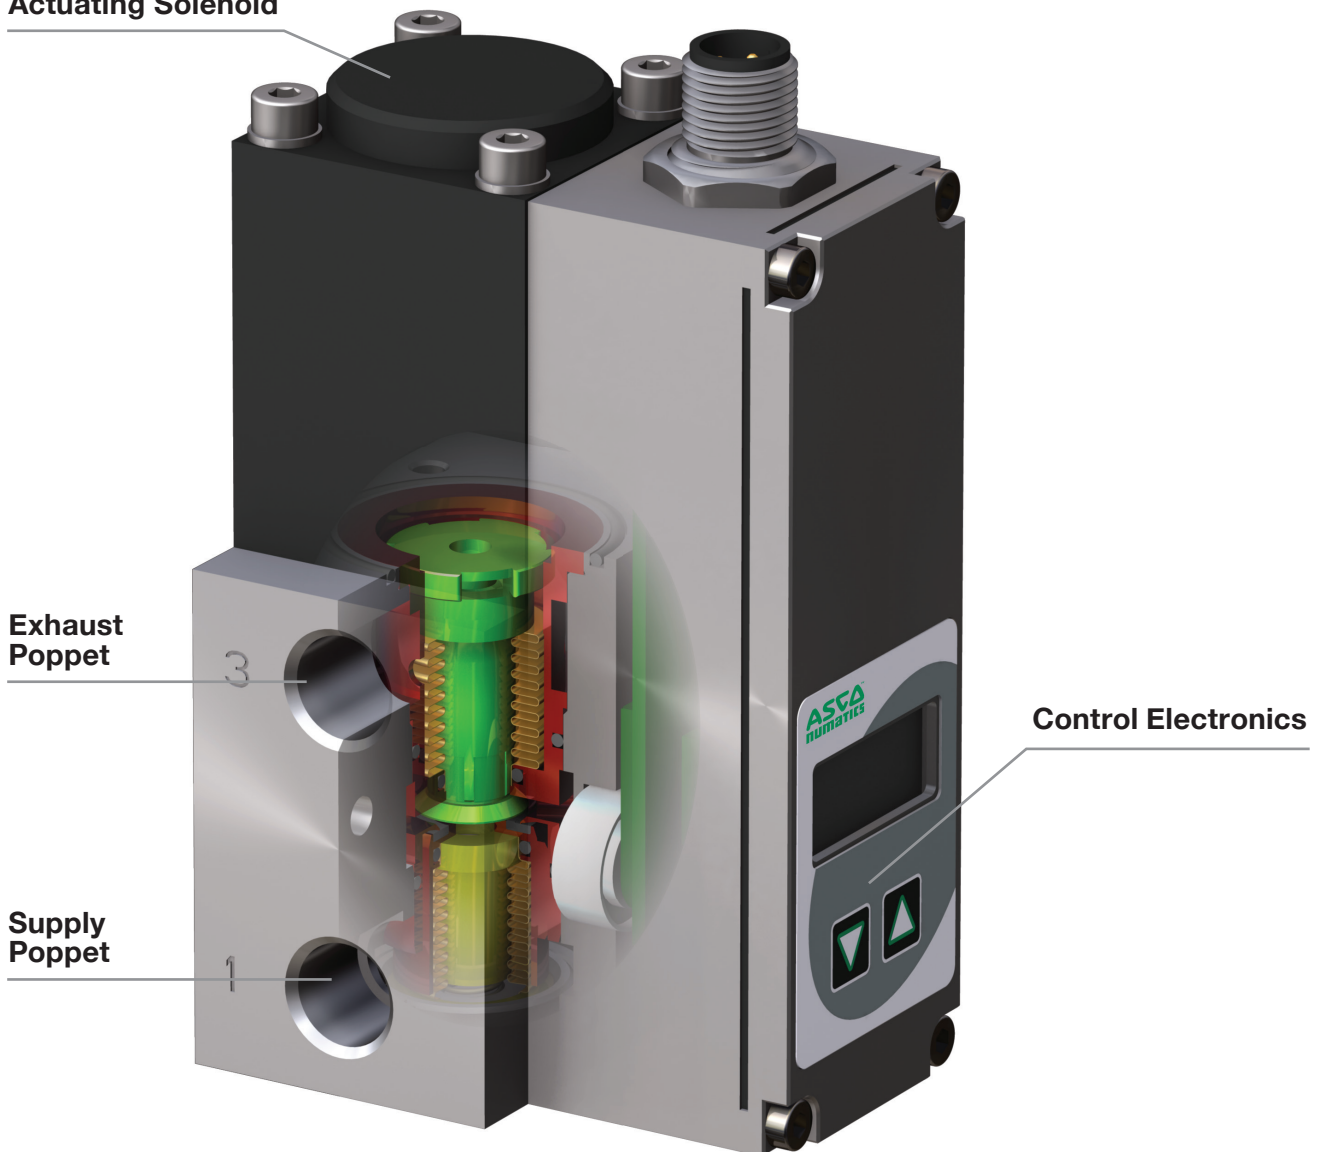

All Sentronic valves are tested before leaving our manufacturing facilities. Each valve is provided with a test certificate showing all the test results.



### Advantages

- Minimum hysteresis
- Quick response times
- Very high sensitivity
- Standard 50 µm filtration
- No constant air consumption
- Analog command signal
- Analog feedback output
- PC communication
- Digital Control
- Easy change of control parameters



### Vacuum Control Options

Sentronic valves can be used or applications where pressure and vacuum control is required. For instance, for testing the strength of piping, for testing car brake amplifiers, etc.

#### 3 versions are available:

##### V1 "Shut-off" version


The valve is connected between the vacuum pump and the system to be regulated as shown in the diagram below. As long as the level of vacuum is not reached, the Sentronic<sup>PLUS</sup> valve allows free flow between the pump and the load system. When the setpoint is reached, the valve closes the circuit and no more air is consumed. In the event of leakage of the load system, the valve provides regulation by reconnecting the volume to the vacuum pump. When the setpoint is switched off, the valve breaks the vacuum by connecting the volume to atmosphere. When the 24 VDC is switched off, the valve connects the outlet to maximum vacuum.

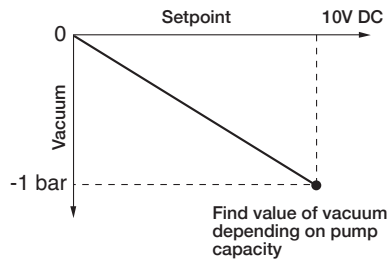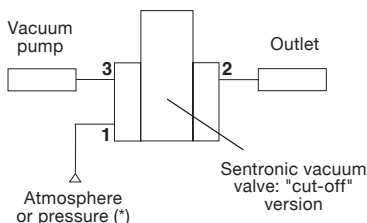

##### V2 "By-pass" version


The vacuum pump operates continuously and the Sentronic<sup>PLUS</sup> is installed in a branch to regulate the level of the vacuum in the load system as a function of the setpoint by allowing a variable rate of air at atmospheric pressure to enter the system.

In this case, port 3 must be plugged.

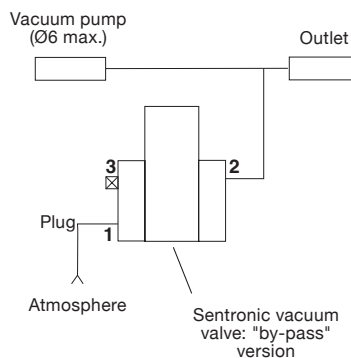


\*To accelerate vacuum control, it is possible to apply pressure (max. 2 bar) instead of atmospheric pressure to port 1 in the V1 Shut-off version or to port 3 in the V3 Shut-off version

### Operating Principle

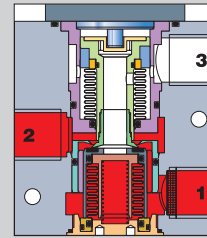


#### Increasing Pressure

The pressurization piston is operated and the flow from port 1 to port 2 is released.

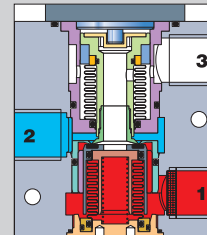

#### Exhausting Pressure

The exhaust piston is lifted and the flow from port 3 to port 2 is released.

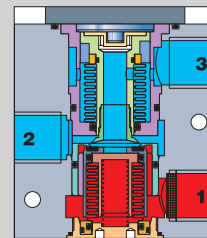


#### Maintaining Pressure

The exhaust piston is in its central position: the flow between port 2 and port 1 or port 3 is blocked.

##### V3 "Shut-off" version

Version V3 has the same function as version V1, but connects the outlet to atmosphere on loss of power. There is no current to the proportional coil when zero vacuum is commanded.

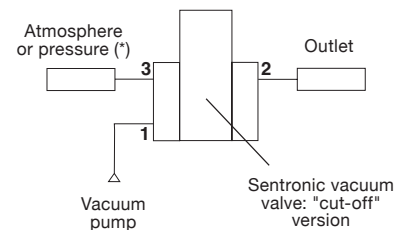

## How to Order

**6 1 4 3 5 7 E 9 0 1 1 PB**

### Control Panel

- D = M12 with display - non-explosionproof
- E = M12 without display - explosionproof (ATEX)
- F = DIN connector, 7-pin, with display - non-explosionproof<sup>1</sup>
- G = DIN connector, 7-pin without display - non-explosionproof<sup>1</sup>

### Version (ports), Body

- 0 = DN6 (G 1/4), ALU
- 1 = DN12 (G 1/2), ALU<sup>2</sup>
- 2 = DN20 (G 1), ALU<sup>2</sup>
- 4 = DN6 (NPT 1/4), ALU
- 5 = DN12 (NPT 1/2), ALU<sup>2</sup>
- 6 = DN20 (NPT 1), ALU<sup>2</sup>
- 7 = DN3 (G 1/8), Brass
- 8 = DN6 (G 1/4), Brass
- 9 = DN3 (NPT 1/8), Brass
- A = DN6 (NPT 1/4), Brass
- C = DN6 (G 1/4), Stainless Steel
- G = DN6 (NPT 1/4), Brass<sup>3</sup>
- H = DN6 (G 1/4), Brass
- J = DNI (G 1/4), Brass<sup>3</sup>
- K = DNI (NPT 1/4), Brass

### Command Signal

- 0 = 0 – 10 V
- 1 = 0 – 20 mA
- 2 = 4 – 20 mA

### Feedback

- 1 = Feedback output 0 – 10 Volt
- 2 = Feedback output 0 – 20 mA
- 3 = Feedback output 4 – 20 mA
- 4 = Feedback input 0 – 10 Volt<sup>4</sup>
- 5 = Feedback input 0 – 20 mA<sup>4</sup>
- 6 = Feedback input 4 – 20 mA<sup>4</sup>

### Options

- A00 = Dual loop control
- 018 = Oxygen clean

### Pressure Range

#### Output Pressure (psi)

- 40 = 0 – 0.1 bar (1.5)
- 50 = 0 – 0.5 bar (7.3)
- 60 = 0 – 1 bar (14.5)
- 02 = 0 – 2 bar (29)
- 03 = 0 – 3 bar (44)
- PA = 0 – 3.4 bar (50)
- 05 = 0 – 5 bar (73)
- 06 = 0 – 6 bar (87)
- PB = 0 – 6.9 bar (100)
- 10 = 0 – 10 bar (145)
- PC = 0 – 10.3 bar (150)
- 12 = 0 – 12 bar (174)
- PD = 0 – 12.8 bar<sup>5</sup> (200)
- 16 = 0 – 16 bar<sup>5</sup> (232)
- PE = 0 – 17.2 bar<sup>5</sup> (250)
- 20 = 0 – 20 bar<sup>5</sup> (290)
- PF = 0 – 20.7 bar<sup>5</sup> (350)
- 3H = 0 – 30 bar<sup>6</sup> (435)
- 5H = 0 – 50 bar<sup>6</sup> (725)

#### Max. Inlet Pressure (psi)

- 2 (29)
- 2 (29)
- 2 (29)
- 3 (44)
- 8 (116)
- 8 (116)
- 8 (116)
- 12 (174)
- 12 (174)
- 12 (174)
- 12 (174)
- 14 (203)
- 18 (261)
- 18 (261)
- 22 (316)
- 22 (316)
- 22 (316)
- 40 (580)
- 60 (870)

#### Vacuum (relative)

- V1 = 0 to -1 bar  
Shut-off valve, connects to vacuum on loss of power
- V2 = 0 to -1 bar  
Bypass valve
- V3 = 0 to -1 bar  
Shut-off valve, connects to atmosphere on loss of power

#### Absolute Pressure Ranges Available on Request

### Digital Output

- 1 = Pressure switch output PNP ± 5%


<sup>1</sup> 7-pin DIN connector allows crossover from 833-354 or 601 Series legacy analog Sentronic version; ships with field installable connector.

<sup>2</sup> Up to max. 12 bar <sup>3</sup> Only for pressure ranges from 30 to 50 bar <sup>4</sup> Feedback input is needed for dual loop units

<sup>5</sup> Only for DN1, DN3 & DN6 <sup>6</sup> Only for DN6 body type G or H. Other versions available on request.

## Sentronic<sup>PLUS</sup> Electronic Pressure Regulator

Sentronic<sup>PLUS</sup> is a 3-way proportional valve with digital control. Its construction allows the valve to be used in potentially explosive atmospheres according to ATEX Directive 94/9/EC. The valve also has pressure ranges from 1.5 psi to 725 psi. The Data Acquisition Software (DaS) that comes with Sentronic<sup>PLUS</sup> can be used to adjust the valve's control parameters to a specific application. Command signal, feedback signal and control parameters can be viewed in real time and adjusted as required for an application. Settings can be saved and loaded at any time for reference or diagnostics. Sentronic<sup>PLUS</sup> can be configured for dual loop control of process variables such as flow, force, speed, RPM, and temperature.

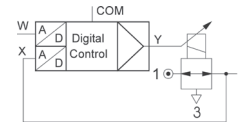

Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm, condensate-free, lubricated or unlubricated	0 °C to 60 °C (32 °F to 140 °F)	Aluminum	Stainless steel and brass	NBR (nitrile) and FPM (fluoroelastomer)

General Valve Information	
Fluid Temperature	0 °C to 60 °C (32 °F to 140 °F)
Command Signal- analog	0 – 10 V (impedance 100 KΩ), 0 - 20 mA/4 - 20 mA (impedance 250 Ω)
Ports	1/8, 1/4, 3/8 (NPT or GTap)
Construction	Direct-operated Poppet Valve
Hysteresis	1% of span
Linearity/ pressure measurement	± 0.5% of span
Repeatability	± 0.5% of span
Explosion Safety	
Safety code	Ⓔ II 2D Ex tb IIC T135°C Db, Ⓔ II 3G Ex nA IIC T4 Gc, 0 ≤ Ta ≤ 50°C
EC type examination certificate number	IBExU07ATEX1173

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
1	24 VDC = ± 10%	12	500	F	IP65	5-pin M12 connector or 7-pin DIN connector
3	24 VDC = ± 10%	12	500	F	IP65	5-pin M12 connector or 7-pin DIN connector
6	24 VDC = ± 10%	24 <sup>1</sup>	1000 <sup>1</sup>	F	IP65	5-pin M12 connector or 7-pin DIN connector
12	24 VDC = ± 10%	34	1400	F	IP65	5-pin M12 connector or 7-pin DIN connector
20	24 VDC = ± 10%	44	1800	F	IP65	5-pin M12 connector or 7-pin DIN connector

\* Max. ripple: 10%

<sup>1</sup> For DN6, brass version G or H/1.8A, 44W



Specifications			
Ø Ports	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm <sup>3</sup> /h)	at 6 Bar (l/min - ANR)
1/8 NPT or GTap	1	0.032 (0.028)	30
1/8 NPT or GTap	3	0.21 (0.18)	210
1/4 NPT or GTap	6	0.70 (0.60)	700
1/2 NPT or GTap	12	1.39 (1.20)	1400
1 NPT or GTap	20	5.57 (4.80)	5600



## Dimensions: inches (mm)



### 1/8 NPT or GTap (DN1 and DN3)

Weight: 0.55kg (1.21lbs)

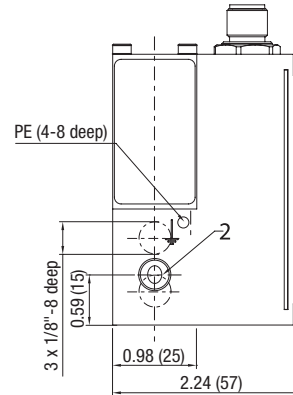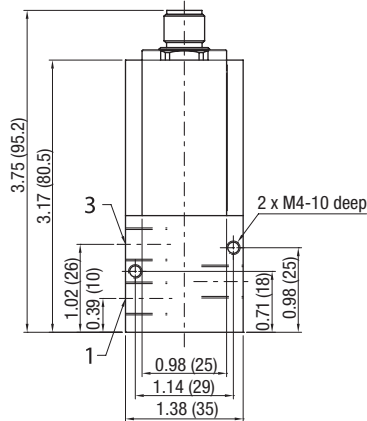

### 1/4 NPT or GTap



Weight: 0.85kg (1.87lbs)

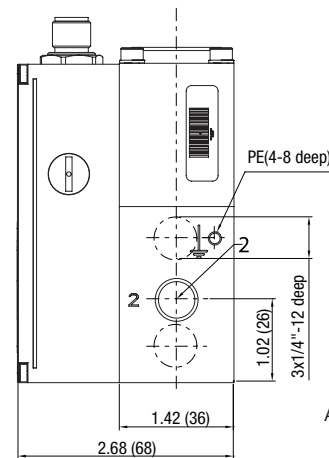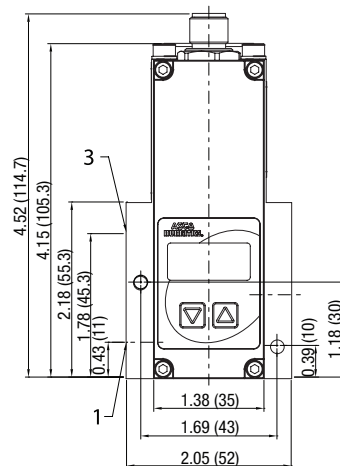

A) Thread M5 - depth 10  
(on opposite side); tapped  
through-hole for M4 screw.

### 1/2 NPT or GTap

Weight: 1.65kg (3.64lbs)

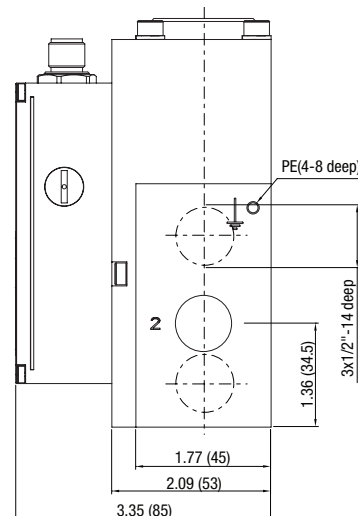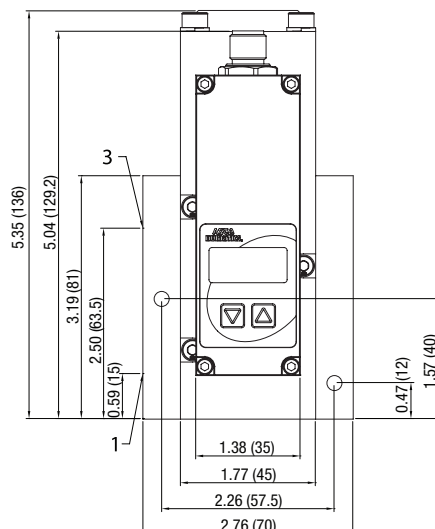


A) Thread M5 - depth 10  
(on opposite side); tapped  
through-hole for M4 screw.


**Dimensions: inches (mm)**

**1 NPT or GTap**

Weight: 3.40kg (7.50lbs)

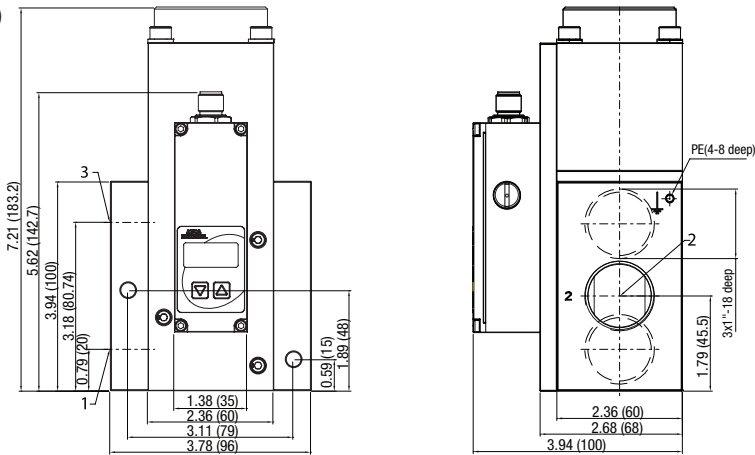

**Connector Pin Out**

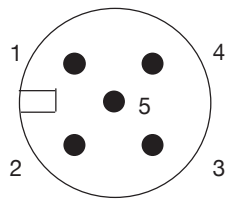

Pin	Description
1	+24 VDC Supply
2	Command Signal
3	+0 VDC Common (Supply)
	+0 VDC Common (Command Signal)*
4	Analog output (Feedback)
5	Digital output (Pressure switch)
Body	EMV screen

\* A 6-wire cable with separate common for the command signal is used for cable lengths over 2m to minimize the voltage drop for the command signal.

**Accessories**



5 Pin 12mm FEMALE Straight Field Attachable Connectors		Model Number
PG 9 Cable Gland		TC05F20000000000
5 Pin 12mm FEMALE 90 DEGREE Field Attachable Connectors		
PG 9 Cable Gland		TD05F20000000000
Micro Female 5 Pole Straight 6 Wire 24 AWG, Shielded		
3 Meter		TC0503MMS000671Y
5 Meter		TC0505MMS000671Y
Micro Female 5 Pole 90 Degree 6 Wire 24 AWG Euro Color Code, Shielded		
3 Meter*		TD0503MMS000671Y*
5 Meter*		TD0505MMS000671Y*
PC Software & Cable Connectors		Model Number
DaS Light: Data Acquisition Software for Sentronic <sup>D</sup> - basic parameters - free download at asco.com		99100110
DaS Expert: Data Acquisition Software for Sentronic <sup>D</sup> - full parameters		Consult Factory
RS 232 cable converter; 2m cable with 9-pin Sub-D (connector required for software usage)		88100732

\* Do not use with the 1" Sentronic<sup>PLUS</sup>



# ASCO NUMATICS 614 SERIES SENTRONIC PLUS IO-LINK VERSION

**PROPORTIONAL  
TECHNOLOGY**

## How to Order

**6 1 4 3 5 7 E 9 0 1 1 PB**

### Control Panel

B = IO-LINK with display  
C = IO-Link without display

### Version (ports), Body

0 = DN6 (G 1/4), ALU  
4 = DN6 (NPT 1/4), ALU  
7 = DN3 (G 1/8), Brass  
8 = DN6 (G 1/4), Brass  
9 = DN3 (NPT 1/8), Brass  
A = DN6 (NPT 1/4), Brass  
C = DN6 (G 1/4), Stainless Steel

### Command Signal

B = IO-LINK CLASS A

### Feedback

B = IO-LINK CLASS A

### Options

A00 = Dual loop control  
018 = Oxygen clean

### Pressure Range

#### Output Pressure (psi)

40 = 0 - 0.1 bar (1.5)  
50 = 0 - 0.5 bar (7.3)  
60 = 0 - 1 bar (14.5)  
02 = 0 - 2 bar (29)  
03 = 0 - 3 bar (44)  
PA = 0 - 3.4 bar (50)  
05 = 0 - 5 bar (73)  
06 = 0 - 6 bar (87)  
PB = 0 - 6.9 bar (100)  
10 = 0 - 10 bar (145)  
PC = 0 - 10.3 bar (150)  
12 = 0 - 12 bar (174)

#### Max. Inlet Pressure (psi)

2 (29)  
2 (29)  
2 (29)  
3 (44)  
8 (116)  
8 (116)  
8 (116)  
12 (174)  
12 (174)  
12 (174)  
12 (174)  
14 (203)

#### Vacuum (relative)

V1 = 0 to -1 bar  
Shut-off valve,  
connects to  
vacuum on loss  
of power  
V2 = 0 to -1 bar  
Bypass valve  
V3 = 0 to -1 bar  
Shut-off valve,  
connects to  
atmosphere on  
loss of power

#### Absolute Pressure Ranges Available on Request


### Digital Output

1 = Standard

**Sentronic<sup>PLUS</sup> IO-Link CLASS A Electronic Pressure Regulator**

Sentronic<sup>PLUS</sup> is a 3-way proportional valve with digital control.

- Direct operated valve
- Dynamic behavior (high speed)
- IO - Link CLASS A Version
- RoHS, REACH compliant

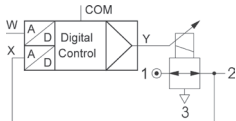

Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm, condensate-free, lubricated or unlubricated	0 °C to 60 °C (32 °F to 140 °F)	Aluminum	Stainless steel and brass	NBR (nitrile) and FPM (fluoroelastomer)

General Valve Information	
Fluid Temperature	0 °C to 60 °C (32 °F to 140 °F)
Command Signal- IO-Link	<b>PSI Pressure Ranges:</b> PA & PB (50 & 100 psi ranges): in digital steps of 0.01 psi PC (150 psi range): in digital steps of 0.1 psi  <b>Bar Pressure Ranges:</b> 40, 50, 60, V1, V2 & V3 (100mbar, 500mbar, 1bar & all vacuum): in digital steps of 0.0001 bar All others: in digital steps of 0.001 bar
Ports	1/8, 1/4 (NPT or GTap)
Construction	Direct-operated Poppet Valve
Hysteresis	0.5% of span
Linearity/ pressure measurement	± 0.5% of span
Repeatability	± 0.5% of span

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
3	24 VDC = ± 10%	12	500	F	IP65	5-pin M12 connector or 7-pin DIN connector
6	24 VDC = ± 10%	24 <sup>1</sup>	1000 <sup>1</sup>	F	IP65	5-pin M12 connector or 7-pin DIN connector

\* Max. ripple: 10%  
<sup>1</sup> For DN6, brass version G or H/1.8A, 44W

Specifications			
Ø Ports	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm <sup>3</sup> /h)	at 6 Bar (l/min - ANR)
1/8 NPT or GTap	3	0.21 (0.18)	210
1/4 NPT or GTap	6	0.70 (0.60)	700






Dimensions: inches (mm)


1/8 NPT or GTap (DN3)

Weight: 0.55kg (1.21lbs)

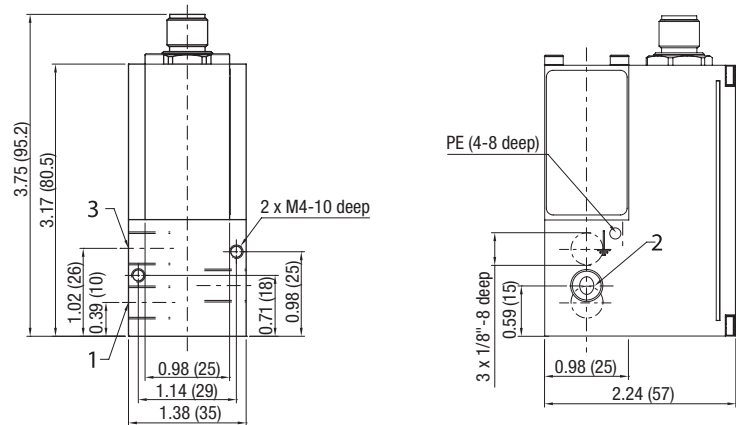


1/4 NPT or GTap

Weight: 0.85kg (1.87lbs)

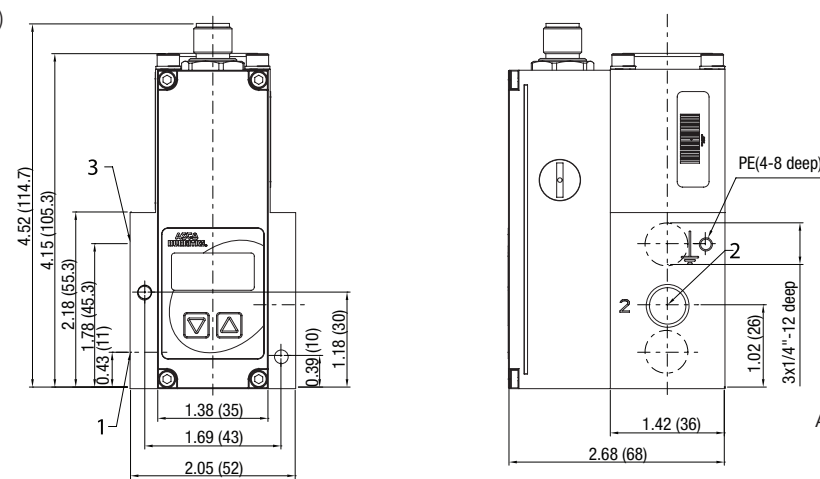

**Connector Pin Out**

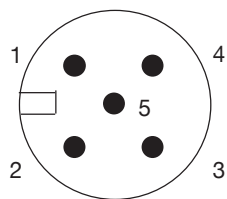

Pin	Description
1	+24 VDC Supply
2	not connected
3	+0 VDC Common (Supply)
4	C/Q
5	not connected
Body	EMC shield

**M12 Class A & B Compatible Cables\* and Accessories**



M12 Straight 5 Pin Female Single Ended Cable - Unshielded
TC0505MIE000071P – 5 Meter
TC0510MIE000071P – 10 Meter



M12 Straight 5 Pin Female to Male Double Ended Cable - Unshielded
TC0505MIETA0571P – 5 Meter
TC0510MIETA0571P – 10 Meter



M12 90° 5 Pin Female Single Ended Cable - Unshielded
TD0505MIE000071P – 5 Meter
TD0510MIE000071P – 10 Meter




M12 90° 5 Pin Female to Male Double Ended Cable - Unshielded
TD0505MIETA0571P – 5 Meter
TD0510MIETA0571P – 10 Meter

\*Reference our G3 Fieldbus catalog for M12 4 pin cables if the selected IO-Link® Master does not accept 5 pin cables. Maximum IO-Link cable length is 20m.

### Sentronic<sup>HD</sup>

Sentronic<sup>HD</sup> is a highly accurate three-way proportional valve with digital control and a broad range of diagnostic functions. It is supplied with DaS HD software which can be used with a PC for optimal calibration of the valve.

- Control which is stable under pressure
- Comprehensive diagnostic functions
- Industry 4.0 ready
- Minimal power consumption (< 5 Watt)
- Control deviation < 0.25%
- Minimal heating of device
- Integrated web server

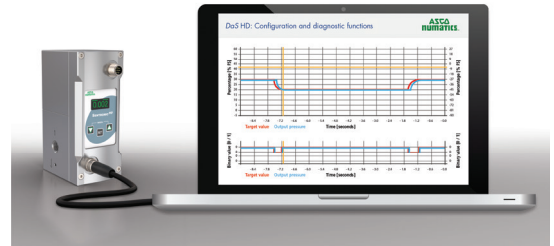

#### M12 Connection:

Power Supply  
Target/Actual Value/Input/Output  
Frequency Input

#### Digital Display

#### Adjustment Buttons

Ethernet TCP/IP:  
Programming Interface

Proportional  
Pilot Valve


Exhaust:  
G1/4 Connection

Output:  
G1/4 Connection



**Sentronic<sup>HD</sup> Electronic Pressure Regulator**

Sentronic<sup>HD</sup> is a 3-way proportional valve with digital control. The Data Acquisition Software (DaS) that comes with Sentronic<sup>HD</sup> can be used to adjust the valve's control parameters to a specific application. Command signal, feedback signal and control parameters can be viewed in real time and adjusted as required for an application. Sentronic<sup>HD</sup> can be configured for dual loop control of process variables such as flow, force, speed, RPM, and temperature.

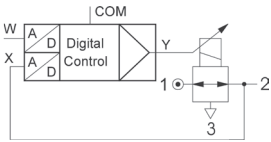

Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, condensate-free, lubricated or unlubricated, Class 5 to ISO 8573-1	0 °C to 50 °C (32 °F to 122 °F)	Aluminum	Stainless stel, brass, aluminum & POM	FPM (fluoroelastomer)

General Valve Information	
Maximum allowable pressure (MAP)	174 psi (12 bar)
Fluid Temperature	0 °C to 50 °C (32 °F to 122 °F)
Ports	G1/4
Construction	Pilot-operated Valve
Hysteresis	± 0.25% of span
Linearity	± 0.25% of span
Repeatability	± 0.25% of span

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
6	24 VDC = ± 10%	5	240	F	IP65	8-pin M12 connector, A coded (not supplied)

\* Max. ripple: 10%


Specifications			
Ø Ports	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm³/h)	at 6 Bar (l/min - ANR)
G 1/4	6	1.30 (1.12)	1200



\* If Setpoint PMW-Frequency is selected, frequency input is not available at IN 2

**Dimensions: mm (inches)**


Weight: 1.6kg (3.53lbs)

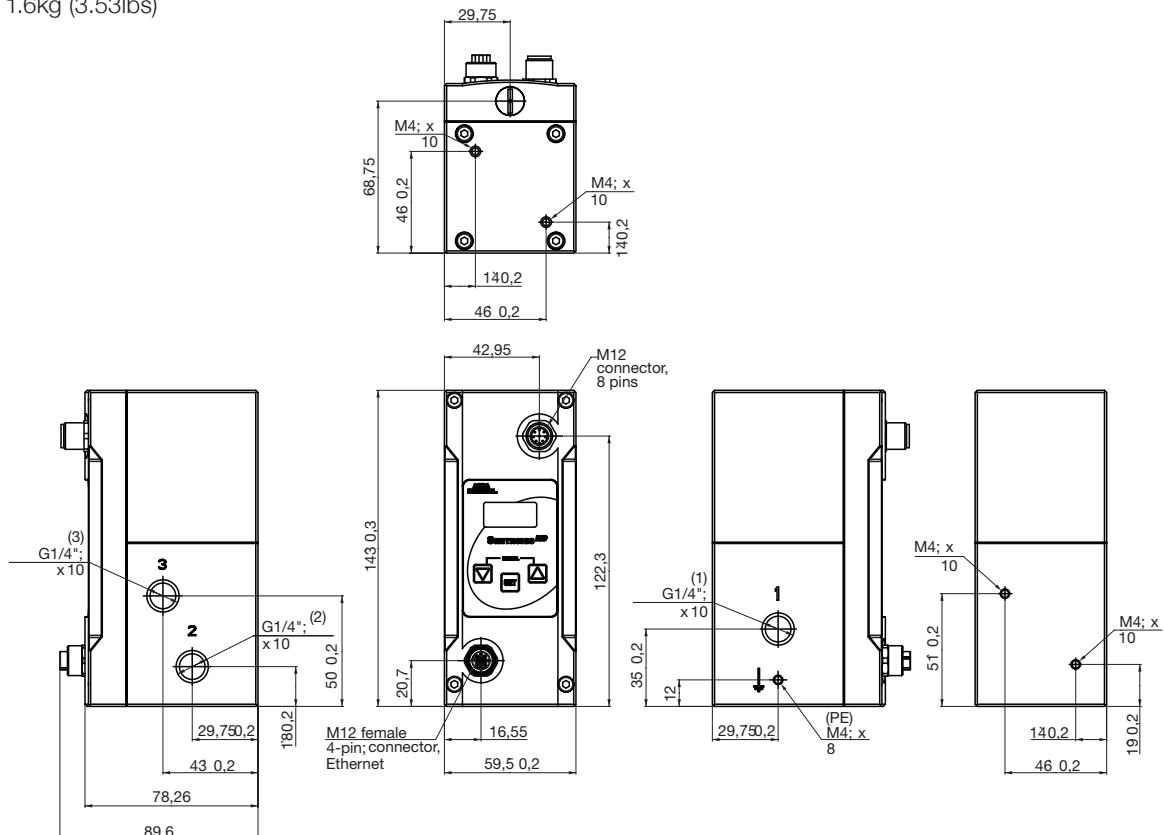


Connector Pinning/Cable Wiring

Ethernet IP programming interface

M12 male connector,  
4-pin, D coded

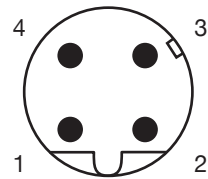


View on male connector (the device is equipped with a female connector)

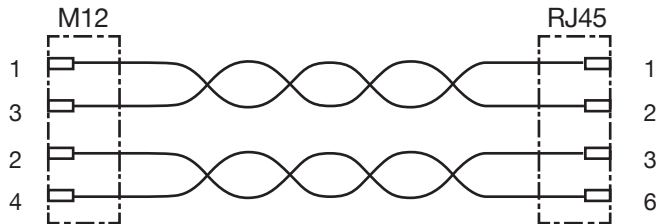

The use of a shielded cable is recommended.

M12 male connector,  
8-pin, A coded

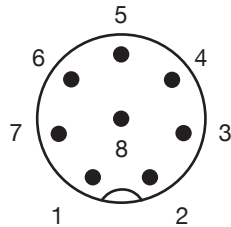

View on valve

Pin	Description	8-wire cable (5m, 10m)
1	Digital Input	white
2	24 VDC voltage supply	brown
3	Setpoint ground SET-	green
4	Setpoint SET+ (PWM)	yellow
5	Analog input 2/Digital input 2/Frequency input	gray
6	Analog output	pink
7	Ground 24 VDC	blue
8	Digital output/Analg output 2	red
Body	EMC screen	shield

Accessories

Description	Catalog Number
Supply cable 5m; 8 x 0.50mm²; straight connector	TC0805MQX0000000
Supply cable 10m; 8 x 0.50mm²; straight connector	TC0810MQX0000000
Supply cable 10m; 8 x 0.50mm²; right-angle connector	TD0810MQX0000000
Programming cable 5m; M12 Straight 4 Pin Male D-Coded to Male RJ45	QA0405MK0VA04000



### Sentronic<sup>LP</sup>

The Sentronic<sup>LP</sup> is a highly efficient and cost-effective option for your pressure regulation requirements.

Offering a small footprint, an easy to use and modular design, and advanced software capabilities, the Sentronic<sup>LP</sup> and the full Sentronic range offers unrivaled value and product versatility to optimize your process, whatever the application requirements.


- Low power consumption (< 4 Watt) due to pilot controlled system
- A versatile, compact and lightweight design
- Intelligent digital communication and simple operation
- Pressure remains stable under flow conditions
- Holds pressure on loss of power
- Excellent value option

**M12 Connection:**  
Power Supply  
Target/Actual Value

**Pressure Supply**

**Digital Display**

**Adjustment Buttons**

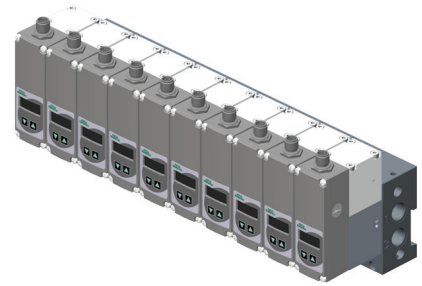

### The Manifold Version

- Space saving design
- Only one pressure supply is needed, allowing for economic, simple and quick installation
- Offers the highest capabilities on the market – can hold up to 10 valves

**Output:**  
1/4 , 3/8 or 1/2 Connection

**Protective Ground  
Connection: M4**

**Mounting**

**Exhaust:**  
1/4 , 3/8 or 1/2 Connection

## Sentronic<sup>LP</sup> Electronic Pressure Regulator

### 1/4 to 1/2 tapped body or subbase mounted body

Sentronic<sup>LP</sup> is a low power, pilot operated electronic proportional valve. Like the entire Sentronic product line, performance can be modified as needed for specific applications using the free ASCO DaS setup software (USB interface cable required).



Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm condensate-free, lubricated or unlubricated, class 5 according to ISO 8573-1:2010 [7:4:4]	0 °C to 50 °C (32 °F to 122 °F)	Aluminum	POM (polyacetal)	NBR (nitrile)

General Valve Information	
Fluid Temperature	0 °C to 60 °C (32 °F to 140 °F)
Minimum Required Pressure	At least 15 psi above the maximum outlet pressure
Pressure Range	0 – 50 psi, 0 – 100 psi, 0 – 150 psi
Setpoint	0 – 10 V (Impedance 100 kΩ), 0 – 20 mA/4 – 20 mA (Impedance 250 Ω)
Hysteresis	1% of span
Linearity	1% of span
Repeatability	1% of span
Minimum Setpoint	100 mV (0.2 mA/4.2mA) with shut-off function
Minimum Outlet Pressure	1% of span
Failsafe Behavior	Pressure hold on loss of power, without control

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
4, 8, 15	24 VDC = ± 10%	3.8 W (< 1 W at pressure)	160	H	IP65	5-pin M12 connector (not supplied)

\* Max. ripple: 10%

Specifications			
Ø Ports NPT or BSPP	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm³/h)	at 6 Bar (l/min - ANR)
1/4	4	0.50 (0.43)	470
3/8	8	1.39 (1.20)	1300
1/2	15	5.57 (4.80)	5200





## How to Order

<p><b>Threaded Connection</b></p> <p>G = ISO 228 (BSPP) 8 = NPT</p> <p><b>Product Series</b></p> <p>617</p> <p><b>Revision</b></p> <p>A = Initial release</p> <p><b>Size</b></p> <p>0 = Manifold Version + pressure hold (DN4)<sup>1</sup> 4 = 1/4 + pressure hold (DN4) 6 = 3/8 + pressure hold (DN8) 8 = 1/2 + pressure hold (DN15)</p> <p><b>Setpoint</b></p> <p>0 = 0 – 10 V 1 = 0 – 20 mA 2 = 4 – 20 mA 5 = 2 Bit, 4 pressure select</p>	<p><b>Pressure Range</b></p> <p><b>Max. Inlet Pressure</b></p> <p>PA = 0 – 50 psi 90 psi PB = 0 – 100 psi 140 psi PC = 0 – 150 psi 190 psi</p> <p><b>Options</b></p> <p>A00 = Standard A07 = Oxygen clean</p> <p><b>Input/Display w/Buttons</b></p> <p>0 = Standard not connected + Display 1 = Standard not connected 8 = Digital IN + Display</p> <p><b>Output 2</b></p> <p>0 = Not connected 1 = Digital OUT<sup>2</sup> (Standard)</p> <p><b>FeedbackType</b></p> <p>0 = 0 – 10 V 1 = 0 – 20 mA 2 = 4 – 20 mA 7 = 2 Bit, 4 pressure select</p>
---	--


<sup>1</sup> See Accessories for individual subbases for this Manifold Version  
<sup>2</sup> No Digital In possible

## Dimensions: mm (inches)

### DN 4

### Inline version

Weight: 0.49kg (1.08lbs)

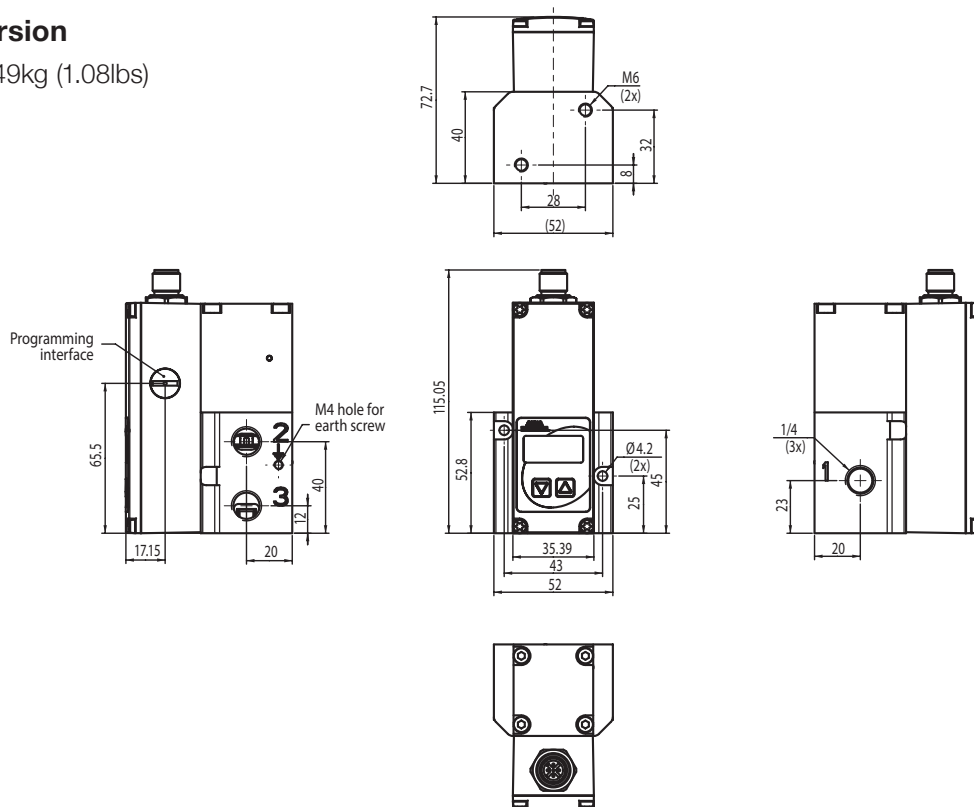


**Dimensions: mm**

**DN 4**

**Subbase version**


Weight: 0.49kg (1.08lbs)

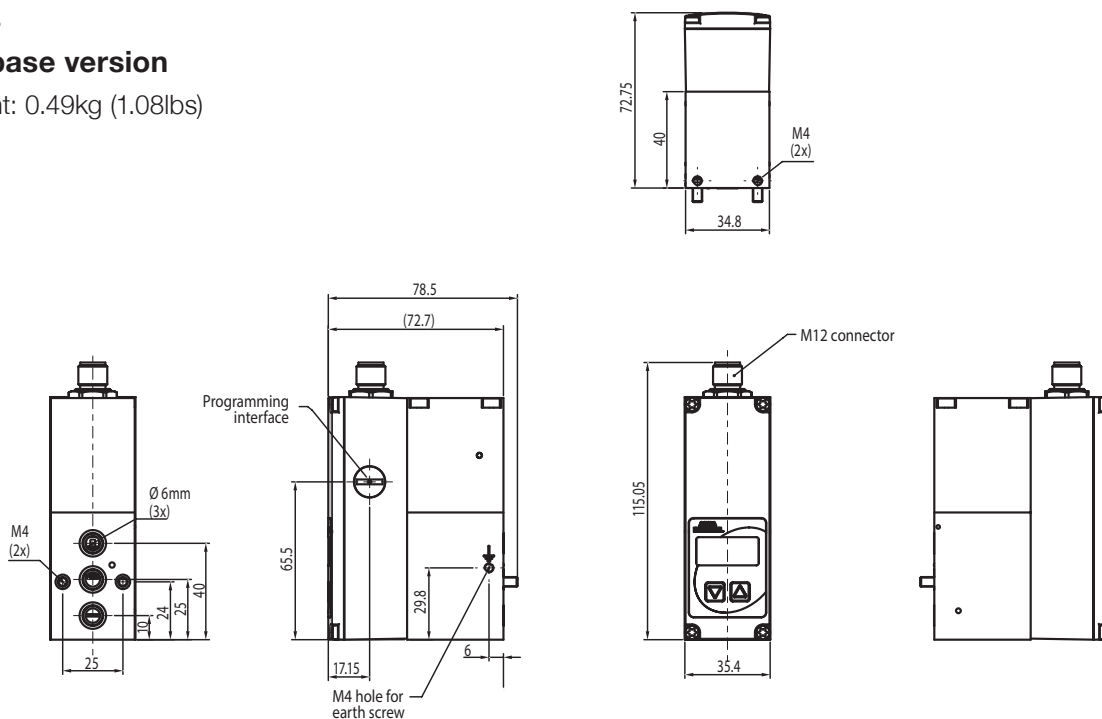

**DN 4**

**Joinable subbase**


Weight: 0.3kg (0.66lbs)

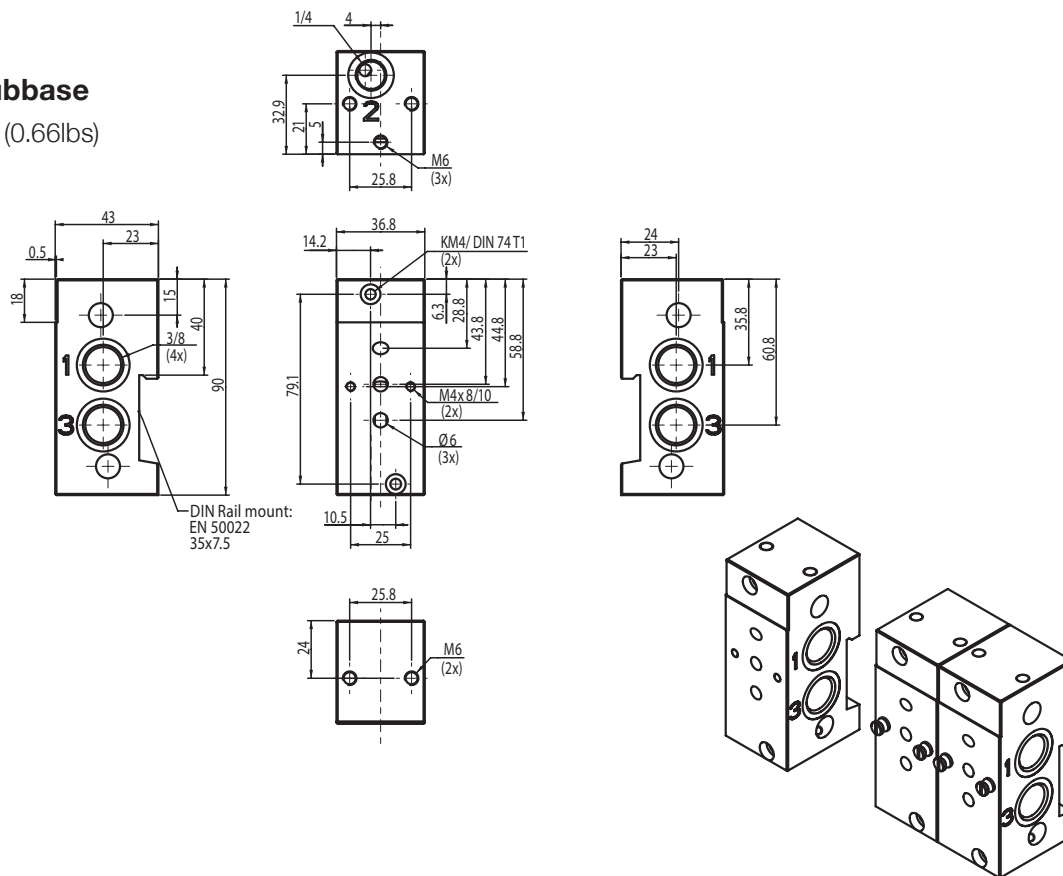

Dimensions: mm


DN 8

Weight: 0.93kg (2.05lbs)

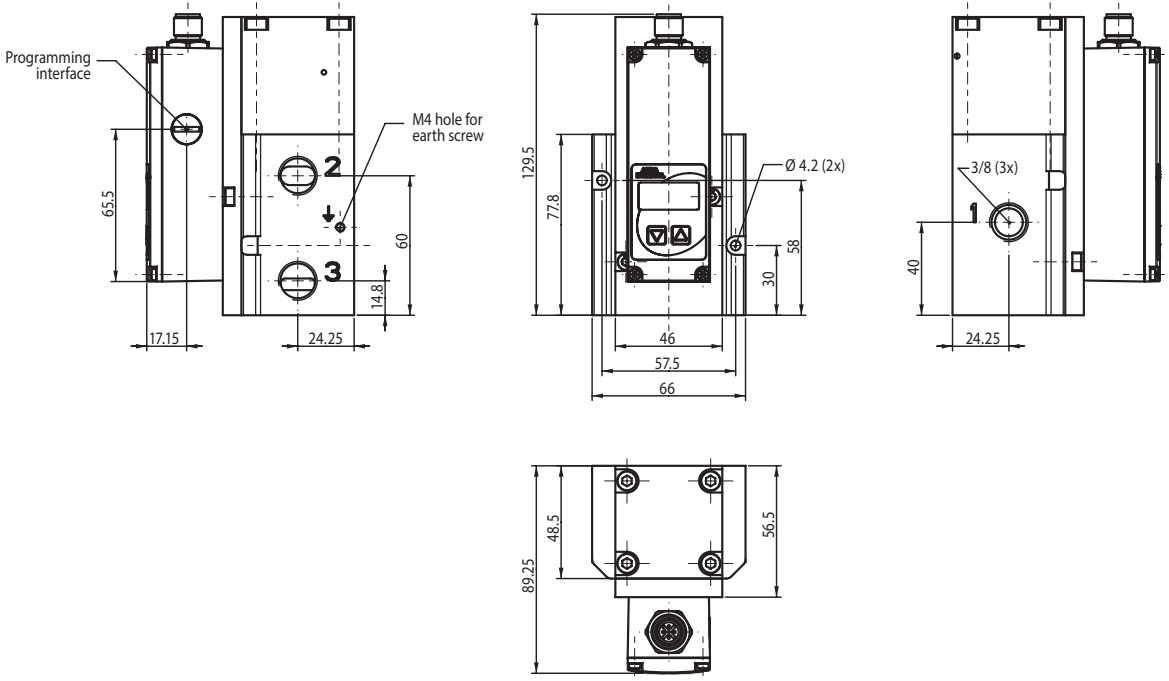


DN 15

Weight: 1.33kg (2.93lbs)

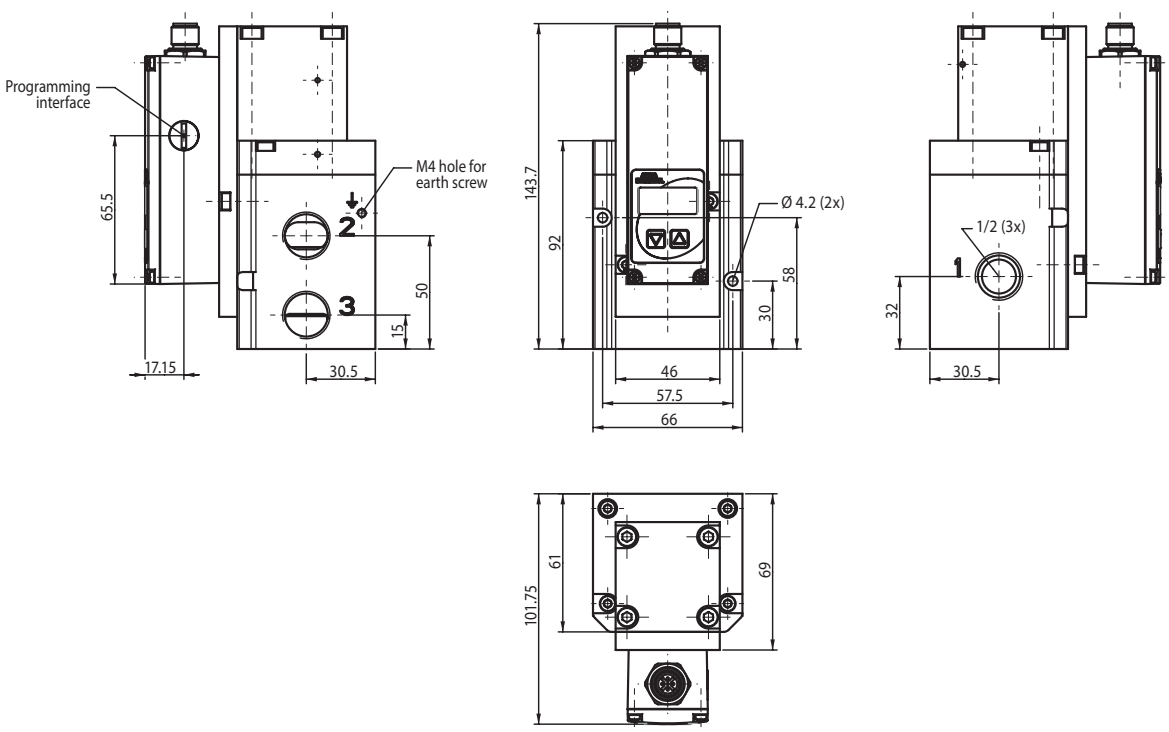


## Connector Pin Out / Cable Wiring

Standard Analog Control

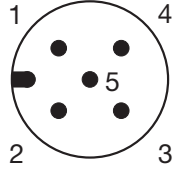

View from soldering side

2 Bit, 4 Pressure Select

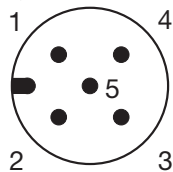

Pin	Description	6-wire cable
1	24 VDC voltage supply	brown
2	Analog Setpoint Input	white
3	Supply common	blue
	Analog common*	yellow
4	Analog output (feedback)	black
5	Digital Output (pressure switch)	gray
Body	EMC screen	shield

\* A 6-wire cable with separate common for the command signal is used for cable lengths over 2m to minimize the voltage drop for the command signal

Pin	Description
1	24 VDC voltage supply
2	Input signal 1 (LSB)
3	Supply common
4	Input signal 2 (MSB)
5	Unused

## Accessories



5 Pin 12mm FEMALE Straight Field Attachable Connectors	Model Number
PG 9 Cable Gland	TC05F20000000000



5 Pin 12mm FEMALE 90 DEGREE Field Attachable Connectors	Model Number
PG 9 Cable Gland	TD05F20000000000



Micro Female 5 Pole Straight 6 Wire 24 AWG, Shielded	Model Number
3 Meter	TC0503MMS000671Y
5 Meter	TC0505MMS000671Y



Micro Female 5 Pole 90 Degree 6 Wire 24 AWG Euro Color Code, Shielded	Model Number
3 Meter	TD0503MMS000671Y
5 Meter	TD0505MMS000671Y



Micro F/M 4 Pole Straight 22 AWG Euro Color Code (for connecting to G3 analog I/O modules or digital I/O for 2Bit Setpoint units)	
Unshielded	Shielded
3 Meter - TC0403MIETA04000	3 Meter - TC0403MMETA04000
5 Meter - TC0405MIETA04000	5 Meter - TC0405MMETA04000



Micro F 90°/M Straight 22 AWG Euro Color Code (for connecting to G3 analog I/O modules or digital I/O for 2Bit Setpoint units)	
Unshielded	Shielded
2 Meter - TD0403MIETA04000	3 Meter - TD0403MMETA04000
5 Meter - TD0405MIETA04000	5 Meter - TD0405MMETA04000

Manifold (individual subbases that join together)	
Manifold for 617 DN4 with pressure supply/exhaust 3/8 NPT & output 1/4 NPT <sup>1</sup>	N50781800200000
Manifold for 617 DN4 with pressure supply/exhaust G3/8 & output G1/4 (BSPP) <sup>1</sup>	N50781800000000

PC Software & Cable Connectors	
DaS Light: Data Acquisition Software for Sentronic <sup>®</sup> - basic parameters - free download at asco.com	99100110
USB interface for software, 2m cable	N50930300100000
RS 232 cable converter; 2m cable with 9-pin Sub-D (plug connector)	88100732

<sup>1</sup> Manifold ships with required hardware and gaskets for connecting manifolds together.



## Sentronic<sup>LP</sup> Electronic Pressure Regulator

**1/4 to 1/2 tapped body or 1/4 subbase mounted body**

Sentronic<sup>LP</sup> is a low power, pilot operated electronic proportional valve.



Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm condensate-free, lubricated or unlubricated, class 5 according to ISO 8573-1:2010 [7:4:4]	0 °C to 50 °C (32 °F to 122 °F)	Aluminum	POM (polyacetal)	NBR (nitrile)

General Valve Information	
Fluid Temperature	0 °C to 60 °C (32 °F to 140 °F)
Minimum Required Pressure	At least 15 psi above the maximum outlet pressure
Pressure Range	0 – 50 psi, 0 – 100 psi, 0 – 150 psi
Setpoint	<b>PSI Pressure Ranges:</b> PA & PB (50 & 100 psi ranges): in digital steps of 0.01 psi PC (150 psi range): in digital steps of 0.1 psi <b>Bar Pressure Ranges:</b> All: in digital steps of 0.001 bar
Hysteresis	1.5% of span
Linearity	1.5% of span
Repeatability	1.5% of span
Minimum Setpoint	0.5% of span with shut-off function
Minimum Outlet Pressure	1% of span
Failsafe Behavior	Pressure hold on loss of power, without control

IO-LINK	
Protocol Version	Specification V1.1
Baudrate	COM3 (230.4 kBaud)
Minimum cycle time	0.5 ms
Process data	2 Byte IN, 2 Byte OUT
Port type	Class A

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
4 , 8, 15	24 VDC = ± 10%	3.8 W (< 1 W at pressure)	160	H	IP65	5-pin M12 connector (not supplied)

\* Max. ripple: 10%

Specifications			
Ø Ports NPT or BSPP	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm³/h)	at 6 Bar (l/min - ANR)
1/4	4	0.50 (0.43)	470
3/8	8	1.39 (1.20)	1300
1/2	15	5.57 (4.80)	5200

## How to Order

<b>Threaded Connection</b>	<b>8</b>	<b>617</b>	<b>A</b>	<b>4</b>	<b>2</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>A00</b>	<b>PB</b>	<b>Pressure Range</b>	<b>Max. Inlet Pressure</b>
G = ISO 228 (BSPP)											PA = 0 – 50 psi	90 psi
8 = NPT											PB = 0 – 100 psi	140 psi
											PC = 0 – 150 psi	190 psi
<b>Product Series</b>											<b>Options</b>	
617											A00 = Standard	
											A07 = Oxygen clean <sup>2</sup>	
<b>Revision</b>											<b>Display w/Keys</b>	
A = Initial release											0 = with display	
											1 = without display	
<b>Size</b>											<b>Output</b>	
0 = Manifold Version + pressure hold (DN4) <sup>1</sup>											1 = standard	
4 = 1/4 + pressure hold (DN4)												
6 = 3/8 + pressure hold (DN8)												
8 = 1/2 + pressure hold (DN15)												
<b>Setpoint</b>											<b>FeedbackType</b>	
8 = IO-Link Class A											6 = IO-Link Class A	

<sup>1</sup> See Accessories for individual subbases for this Manifold Version


<sup>2</sup> Only possible with size 1/4 (DN4)

## Dimensions: mm (inches)

### DN 4

#### Inline version

Weight: 0.49kg (1.08lbs)

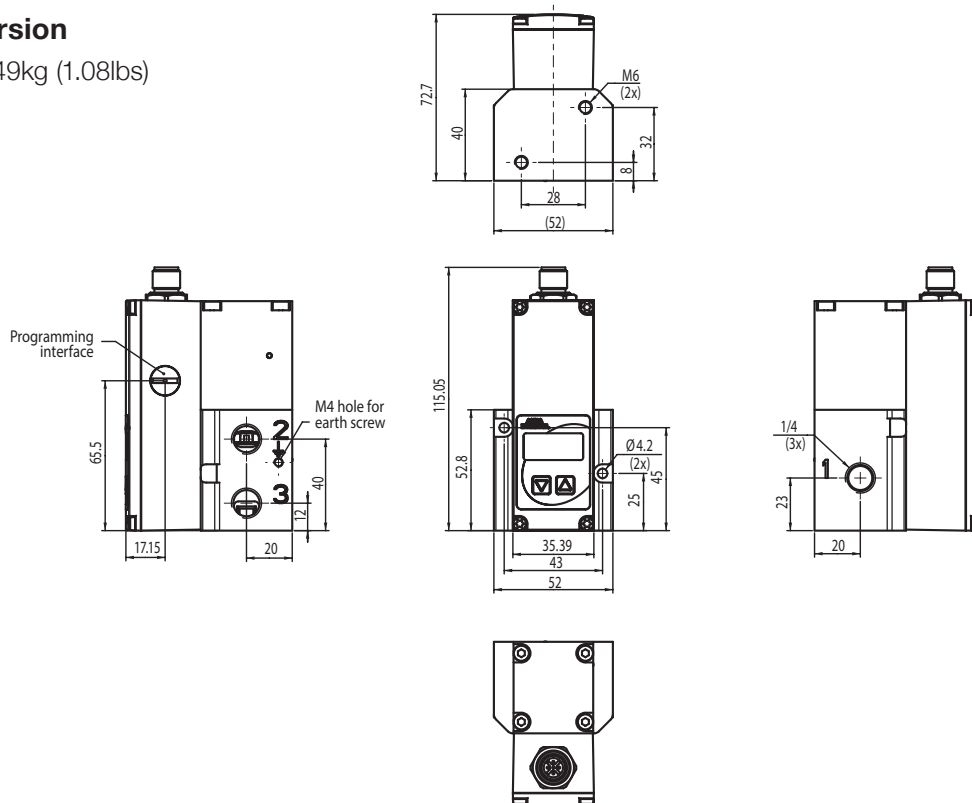


Dimensions: mm

**DN 4**

**Subbase version**


Weight: 0.49kg (1.08lbs)

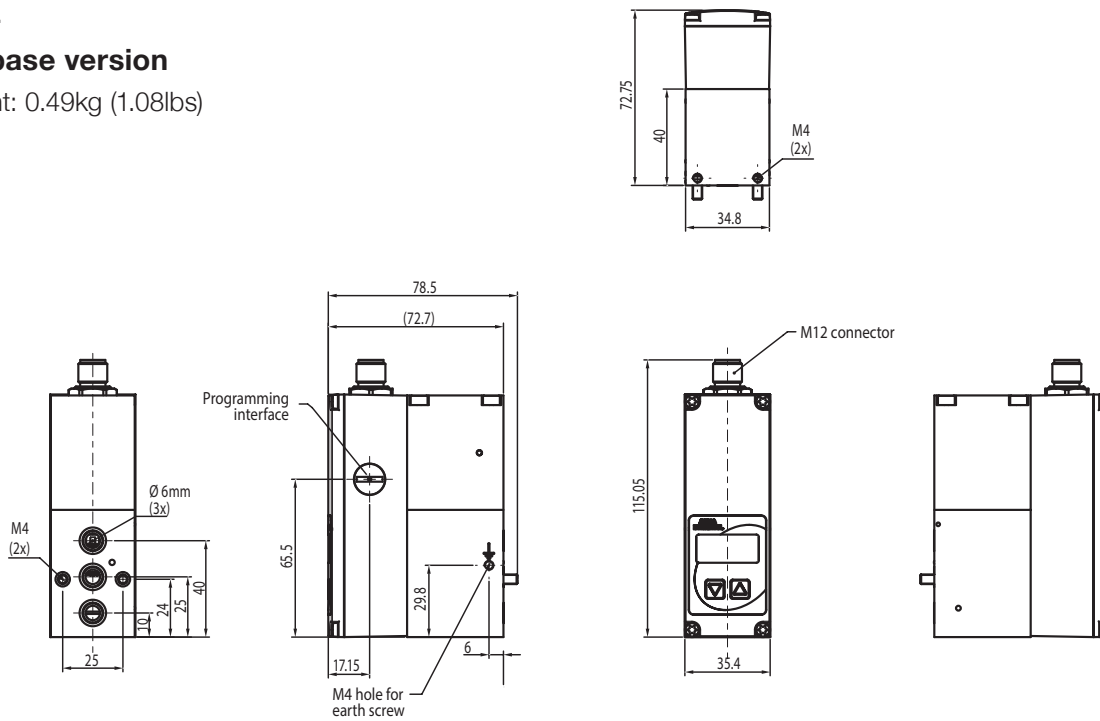

**DN 4**

**Joinable subbase**


Weight: 0.3kg (0.66lbs)

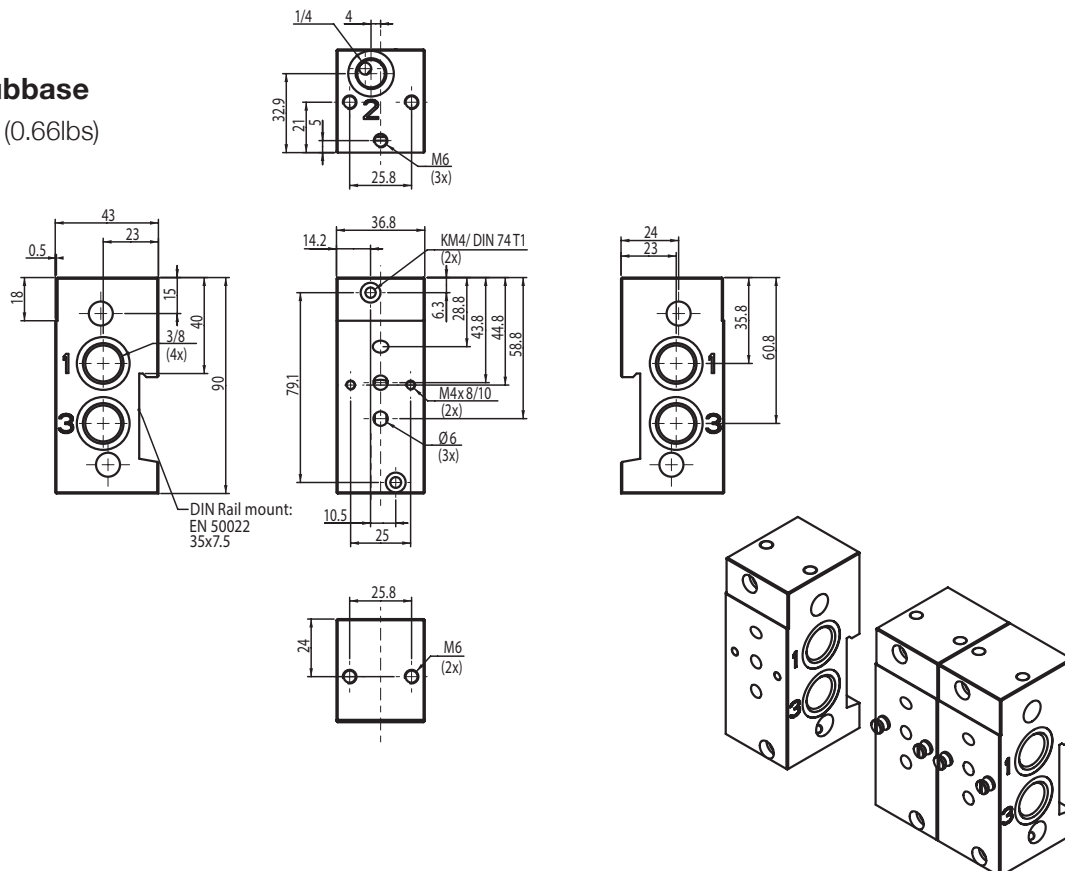

Dimensions: mm


**DN 8**

Weight: 0.93kg (2.05lbs)

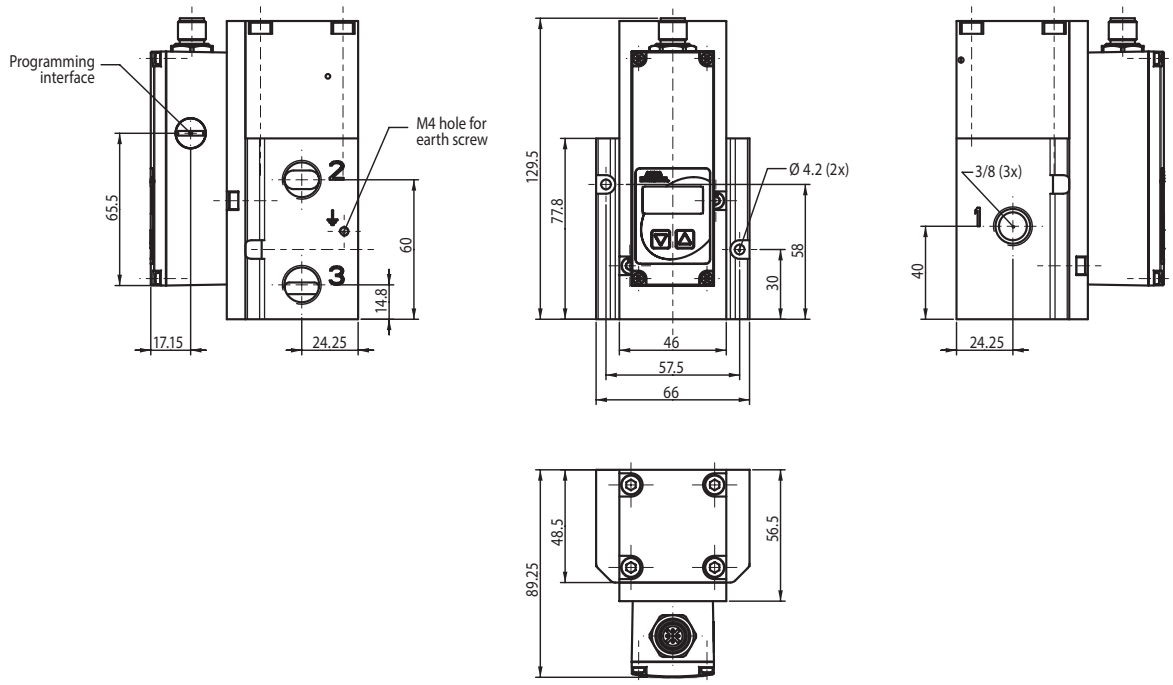


**DN 15**

Weight: 1.33kg (2.93lbs)

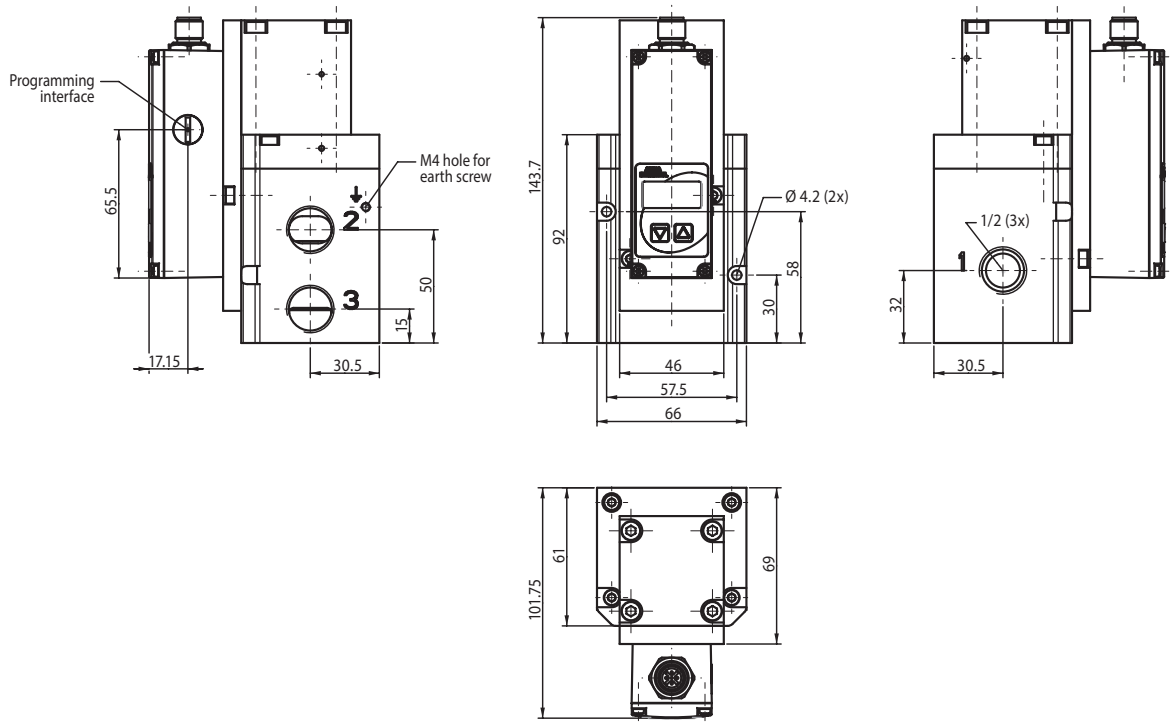



Connector Pin Out / Cable Wiring

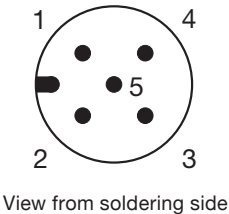

Pin	Description
1	24 VDC voltage supply
2	not connected
3	Supply common
4	C/Q
5	not connected
Body	EMC screen

M12 Class A & B Compatible Cables\* and Accessories



M12 Straight 5 Pin Female Single Ended Cable - Unshielded
TC0505MIE000071P – 5 Meter
TC0510MIE000071P – 10 Meter



M12 Straight 5 Pin Female to Male Double Ended Cable - Unshielded
TC0505MIETA0571P – 5 Meter
TC0510MIETA0571P – 10 Meter



M12 90° 5 Pin Female Single Ended Cable - Unshielded
TD0505MIE000071P – 5 Meter
TD0510MIE000071P – 10 Meter



M12 90° 5 Pin Female to Male Double Ended Cable - Unshielded
TD0505MIETA0571P – 5 Meter
TD0510MIETA0571P – 10 Meter

Manifold (individual subbases that join together)	
Manifold for 617 DN4 with pressure supply/exhaust 3/8 NPT & output 1/4 NPT <sup>1</sup>	N50781800200000
Manifold for 617 DN4 with pressure supply/exhaust G3/8 & output G1/4 (BSPP) <sup>1</sup>	N50781800000000

<sup>1</sup> Manifold ships with required hardware and gaskets for connecting manifolds together.


\*Reference our G3 Fieldbus catalog for M12 4 pin cables if the selected IO-Link® Master does not accept 5 pin cables. Maximum IO-Link cable length is 20m.

### Servotronic<sup>Digital</sup>


Greater versatility in automated production processes: Due to electronics, the new generation of Servotronic products increases the range of applications and performance of pneumatic components. The Servotronic<sup>Digital</sup> directly responds to all pressure control needs and indirectly meets the requirements placed in the control of physical variables, such as position, velocity, acceleration, force, mass etc. The combination of innovative pneumatic technology, high-precision mechanics and modern electronics allows for quick control of pressure in a pneumatic actuating system in relation to a signal received from the controlling electronics.

The Servotronic<sup>Digital</sup> is provided with a precision-lapped steel spool and sleeve with hardened and tempered surface enabling very high pulse frequencies at extremely short response times. The Servotronic<sup>Digital</sup> valve has a constant air consumption.

The valve can be adjusted to a specific application using the DaS software (Data Acquisition Software).

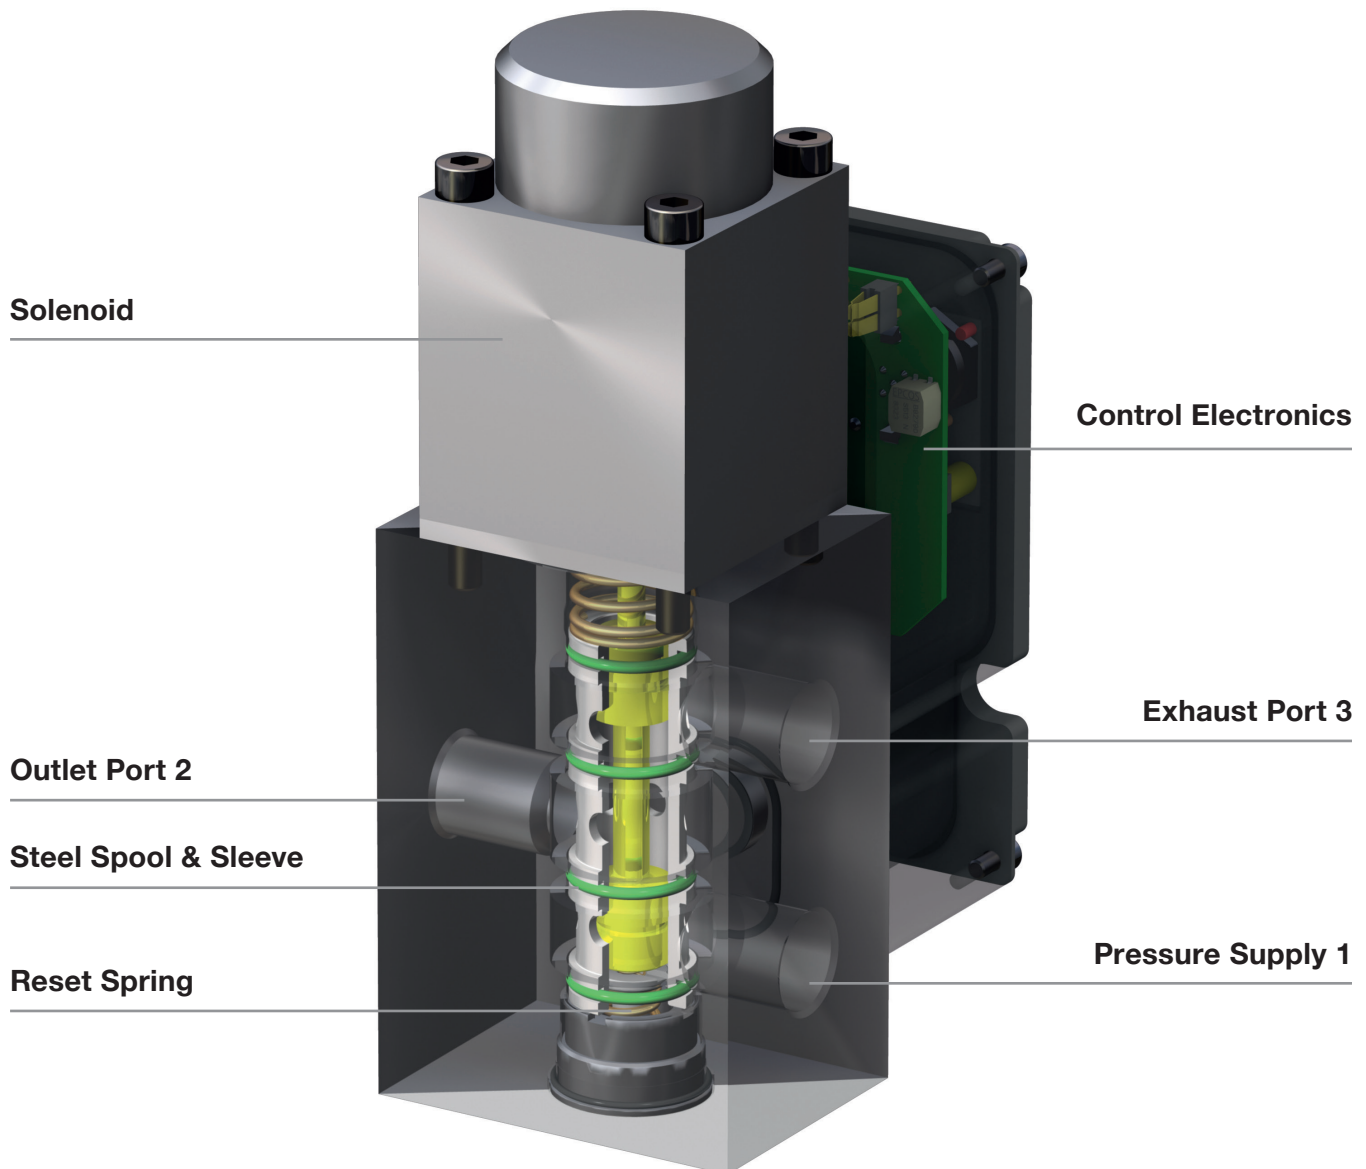


## Operating Principle

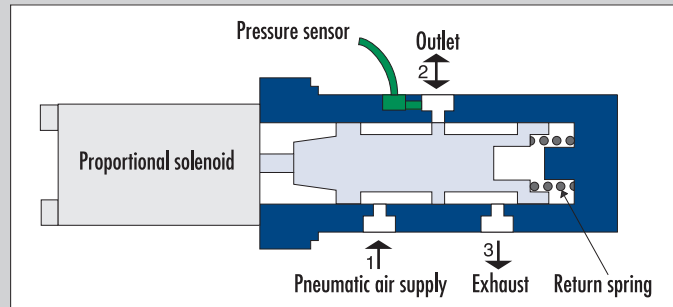

## Applying pressure

The Servotronic<sup>Digital</sup> consists of a spool and sleeve servo-valve with three ports and control electronics to define the pressure in proportion to a given setpoint.

The spool position can be changed continually to maintain a constant outlet pressure in relation to a given setpoint signal.

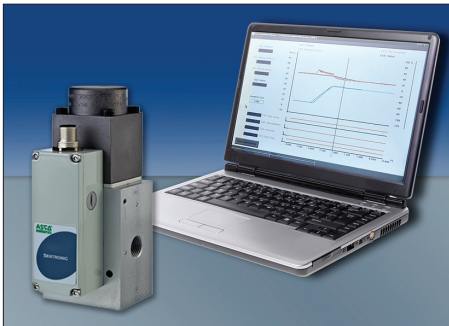

The Data Acquisition Software (DaS) and the RS232 interface allow the controller to be optimally adjusted to the control loop.

## Advantages

- Minimum hysteresis
- Very short response times
- Excellent flow characteristics
- Compact monobloc construction with integrated electronics and sensor
- High reliability and long service life due to precision mechanics combined with simple control technology
- Digital control
- Easy change of control parameters


Servotronic<sup>Digital</sup>

Servotronic<sup>Digital</sup> is a highly dynamic 3-way proportional valve with digital control particularly suitable for applications with constant flow.

Servotronic<sup>Digital</sup> stands for:

- Digital communication and control
- Direct operated valve
- Dynamic behaviour (high speed)

A special feature of the Servotronic<sup>Digital</sup> is its DaS software supplied for optimum adjustment over PC and viewing of setpoint and feedback signals. Other functions are valve diagnostics, parameter setting and maintenance.

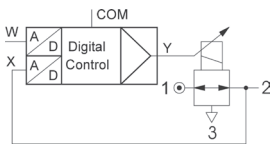

Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm, lubricated or unlubricated	0 °C to 60 °C (32 °F to 140 °F)	Aluminum	Stainless steel and brass	FPM (fluoroelastomer) and NBR (nitrile)

General Valve Information	
Maximum allowable pressure (MAP)	See table below
Fluid Temperature	0 °C to 60 °C (32 °F to 140 °F)
Pressure Range	0 to 40 bar
Setpoint	0 – 10 V, 0 – 20 mA, 4 – 20 mA
Ports	G3/8
Construction	Spool and sleeve valve
Actuation	Lifting solenoid
Hysteresis	0.5% of span
Linearity/pressure measurement	± 0.5% of span
Repeatability	± 0.5% of span
Analog Setpoint	0 – 10 V (impedance 100 KΩ), 0 – 20 mA/4 – 20 mA (impedance 250 Ω)

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
8	24 VDC = ± 10%	20	810	F	IP65	5-pin M12 connector (to be ordered separately)

\* Max. ripple: 10%

Specifications			
Ø Ports	Ø Orifice DN (mm)	Flow	
		C <sub>v</sub> Flow Factor (K <sub>v</sub> Nm³/h)	at 6 Bar (l/min - ANR)
G 3/8	8	1.68 (1.45)	1700



## How to Order

6 1 5 3 7 0 E A S I D P P

### Control Panel

D = M12 with display - non-explosionproof  
E = M12 without display - explosionproof (ATEX)

### Version (connection) Body

7 = Integrated electronics

### Setpoint

0 = 0 – 10 Volt  
1 = 0 – 20 mA  
2 = 4 – 20 mA

### Feedback

1 = Feedback output 0 – 10 Volt  
2 = Feedback output 0 – 20 mA  
3 = Feedback output 4 – 20 mA  
4 = Feedback input 0 – 10 Volt\*  
5 = Feedback input 0 – 20 mA\*  
6 = Feedback input 4 – 20 mA\*

### Pressure Range

#### Output Pressure

40 = 0 – 100 mbar  
50 = 0 – 500 mbar  
60 = 0 – 1 bar  
02 = 0 – 2 bar  
03 = 0 – 3 bar  
05 = 0 – 5 bar  
06 = 0 – 6 bar  
10 = 0 – 10 bar  
12 = 0 – 12 bar  
14 = 0 – 14 bar  
16 = 0 – 16 bar  
20 = 0 – 20 bar  
30 = 0 – 30 bar  
4H = 0 – 40 bar

#### Max. Inlet

Pressure (bar)

2  
2  
2  
3  
8  
8  
12  
12  
14  
18  
22  
35  
45

#### Vacuum (relative)

V3 = 0 to -1 bar  
shut-off valve


### Digital Output

1 = Pressure switch output  
PNP ± 5%


\* Feedback input is needed for dual loop units.

## Dimensions: inches (mm)

Weight: 1.76kg (3.88lbs)

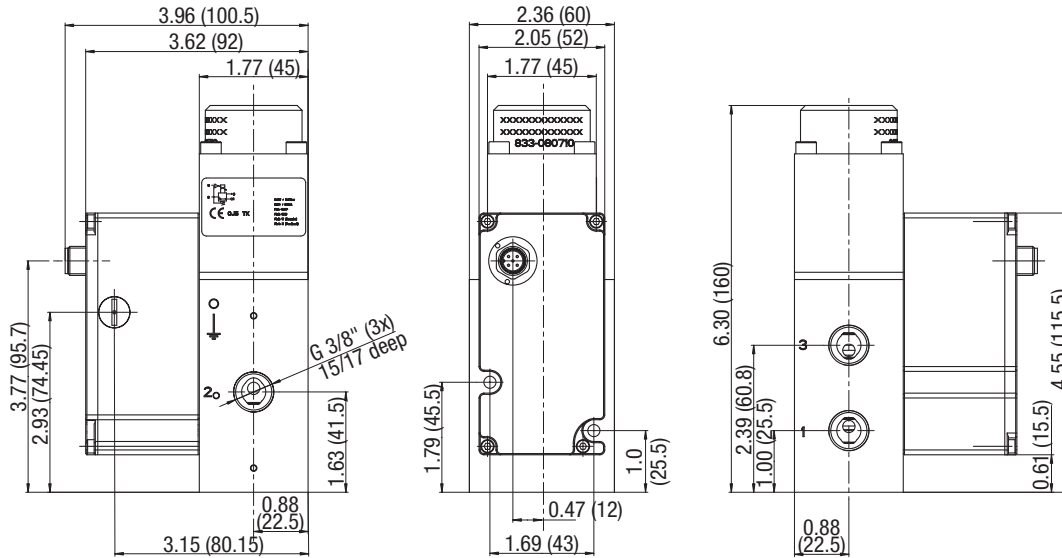

## Connector Pin Out

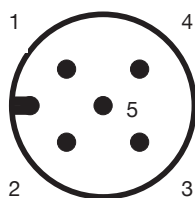

Pin	Description	6-wire cable
1	24V voltage supply	brown
2	Analog setpoint input	white
3	Supply ground	blue
	Analog ground*	yellow
4	Analog output (feedback)	black
5	Digital output (pressure switch)	grey
Body	EMC shield	shield

\* A 6-wire cable with separate analog ground is used for cable lengths over 2m to set off the voltage drop for the setpoint.

## Accessories




5 Pin 12mm FEMALE Straight Field Attachable Connectors		Model Number
PG 9 Cable Gland		TC05F20000000000
5 Pin 12mm FEMALE 90 DEGREE Field Attachable Connectors		
PG 9 Cable Gland		TD05F20000000000
Micro Female 5 Pole Straight 6 Wire 24 AWG, Shielded		
3 Meter		TC0503MMS000671Y
5 Meter		TC0505MMS000671Y
Micro Female 5 Pole 90 Degree 6 Wire 24 AWG Euro Color Code, Shielded		
3 Meter		TD0503MMS000671Y
5 Meter		TD0505MMS000671Y
Micro F/M 4 Pole Straight 22 AWG Euro Color Code		
Unshielded	Shielded	
2 Meter - TC0403MIETA04000	3 Meter - TC0403MMETA04000	
5 Meter - TC0405MIETA04000	5 Meter - TC0405MMETA04000	
Micro F 90°/M Straight 22 AWG Euro Color Code		
Unshielded	Shielded	
2 Meter - TD0403MIETA04000	3 Meter - TD0403MMETA04000	
5 Meter - TD0405MIETA04000	5 Meter - TD0405MMETA04000	
PC Software & Cable Connectors		Model Number
DaS Light: Data Acquisition Software for Sentronic <sup>D</sup> - basic parameters - free download at asco.com		99100110
DaS Expert: Data Acquisition Software for Sentronic <sup>D</sup> - full parameters		Consult Factory
RS 232 cable converter; 2m cable with 9-pin Sub-D (plug connector)		88100732

### Flowtronic<sup>D</sup>


Flowtronic<sup>D</sup> is a digitally operated flow controller up to 70 SCFM (2000 NI/min). The Flowtronic<sup>D</sup> consists of a fast, direct-operated 2-port proportional valve that operates independently of the inlet pressure (max. 116 psi), and a control unit which contains all of the control electronics and sensors. The Flowtronic<sup>D</sup> offers precise flow adjustment and is very responsive to outside disturbances.

Typical applications for the Flowtronic<sup>D</sup> include: Paint coating technology, mixing of gases in process control, packaging and food processing industry, surface finishing and materials coating processes, burner control systems, and fuel cell technology.

The digital control electronics and a USB interface allow the controller to be adapted to different applications. The ASCO FlowCom PC software provides easy start-up.

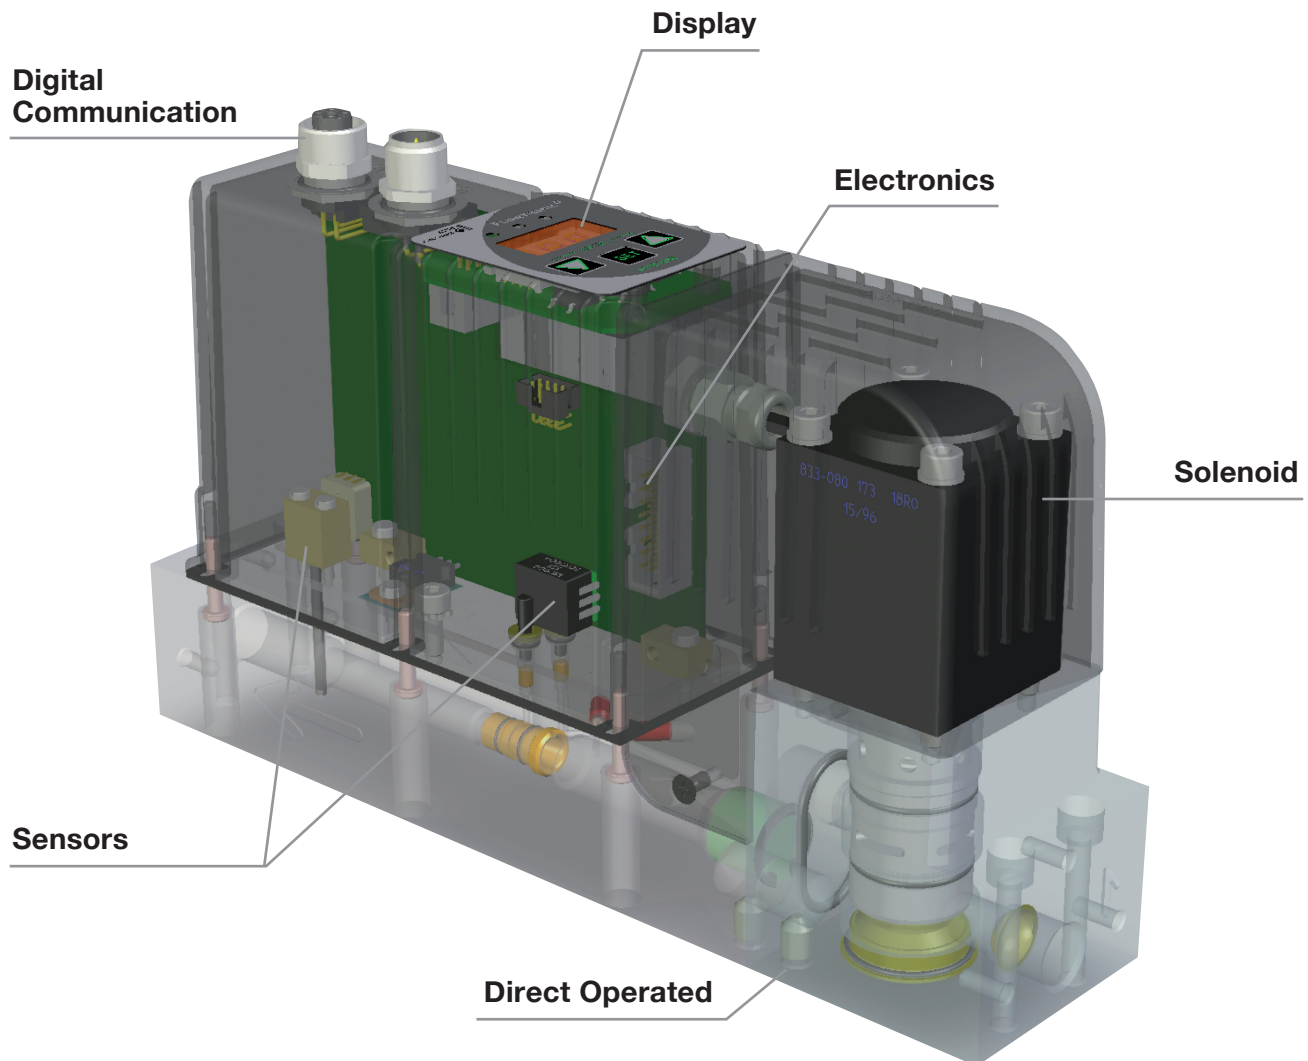




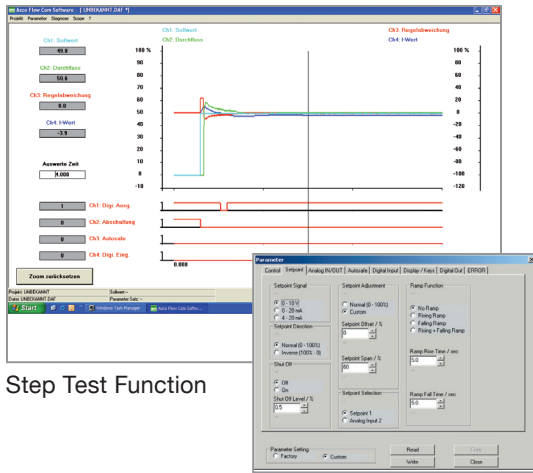


Step Test Function

Parameters Setup

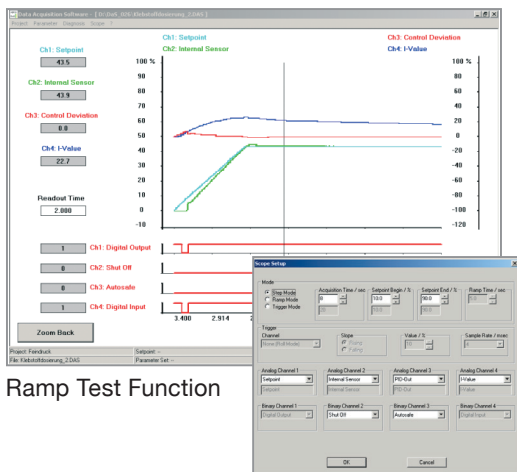

Ramp Test Function

Scope Setup

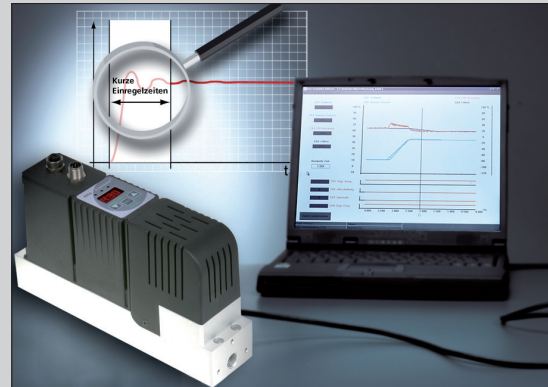

By connecting the Flowtronic<sup>D</sup> to a PC with a USB interface, the Numatics FlowCom software can be used to optimally adjust the valve's control parameters to a specific application. FlowCom software has an oscilloscope function that allows the user to select and visually see various response characteristics as the flow controller operates in an application. Control loop parameters can be adjusted using the software without removing the flow controller from service. This functionality streamlines the application development process. Control parameters can be saved and reloaded at any time.

The ASCO FlowCom software offers the following features:

- Real time display of: command signal, outlet pressure, internal control parameters (e.g. P, I or D), pressure switch signal, etc.
- Parameter setting: command signal, zero offset, span, limitation of output current, ramp function, etc.
- Diagnostics menu for error detection and testing
- Custom adjustment to an application
- Control of Flowtronic<sup>D</sup>

## Advantages

- Low hysteresis
- Quick response times
- Very high sensitivity
- Standard 50 µm filtration
- Analog feedback output
- Easy change of control parameters
- Digital control
- Integrated display (optionally without)
- PC communication





## Flowtronic<sup>D</sup>

- The Flowtronic<sup>D</sup> consists of a fast, direct-acting 2-port proportional valve, a pressure sensor unit and digital control electronics
- Controls applications that have varying flow
- Controls and maintains constant and even flow despite external disturbances such as fluctuating inlet pressure
- Measures flow precisely with two sensors
- Software and PC connection allows parameters to be adjusted to a specific application
- FlowCom software provides quick and easy start-up
- Diagnostic capability using the integrated LEDs or the FlowCom software



Fluids	Ambient Temperature	Body	Internal Parts	Seals
Air or neutral gas, filtered at 50 µm, condensate-free, lubricated or unlubricated	0 °C to 40 °C (32 °F to 104 °F)	Aluminum	Aluminum, stainless steel and brass	NBR (nitrile)

General Valve Information		
Minimum allowable pressure		5 bar (58 psi)
Maximum allowable pressure (MAP)		8 bar (116 psi)
Control range		0.4 – 70.6 SCFM, (10 – 2000 NI/min) (ANR)
Fluid Temperature		0 °C to 50 °C (32 °F to 122 °F)
Pressure Range		up to 116 psi (8 bar)
Ports		1/4, 3/8, 1/2 NPT or GTap
Construction		Poppet valve
Command signal - analog		0 – 10 V (100 kΩ), 0 – 20 mA, 4 – 20 mA (resistance 250 Ω)
Feedback output - analog		0 – 10 V, 0 – 20 mA, 4 – 20 mA (max. load 500 Ω)
Hysteresis		± 3%
Linearity/pressure measurement		± 3%
Repeatability		± 1.5%
Response time		< 200ms
Calibration conditions	Ambient temperature	22.5 °C ± 2.5 °C (72.5 °F ± 4.5 °F)
	Fluid	Air
Nominal diameter		3mm, 5mm, 6mm
Other features		Auto-tune, error display by LED

Electrical Characteristics						
Nominal Diameter DN (mm)	Voltage *	Max. Power (W)	Max. Current (mA)	Insulation Class	Degree of Protection	Electrical Connection
Up to 1000 NI/min	24 VDC = ± 10%	30	1250	H	IP65	- 5-pin M12 connector - USB connection with 4 pin M12 connector
2000 NI/min	24 VDC = ± 10%	34	1400	H	IP65	- 5-pin M12 connector - USB connection with 4 pin M12 connector

\* Max. ripple: 10%

How to Order

8 3 3 - 3 8 0 1 0 1 1 5 0

**Version (ports), Body/Display**

0 = (GTap) without display\*

1 = (GTap) with display\*

2 = 1/2 (GTap) without display

3 = 1/2 (GTap) with display

6 = (NPT) without display\*

7 = (NPT) with display\*

8 = 1/2 (NPT) without display

9 = 1/2 (NPT) with display

**Command Signal**

0 = 0 – 10 Volt

1 = 0 – 20 mA

2 = 4 – 20 mA

**Feedback**

1 = Feedback output 00 – 10 Volt

2 = Feedback output 00 – 20 mA

3 = Feedback output 04 – 20 mA

4 = Feedback input 0 – 10 Volt<sup>1)</sup>

5 = Feedback input 0 – 20 mA<sup>1)</sup>

6 = Feedback input 4 – 20 mA<sup>1)</sup>

**Options**

A00 = Dual loop control

**Flow Regulation Range**

10 = 0.4 - 3.5 SCFM (10 - 100 NI/min)  
(1/4 - Versions 0, 1, 6 or 7 only)

20 = 0.4 - 7.1 SCFM (10 - 200 NI/min)  
(1/4 - Versions 0, 1, 6 or 7 only)

30 = 0.4 - 10.6 SCFM (12 - 300 NI/min)  
(1/4 - Versions 0, 1, 6 or 7 only)

50 = 0.7 - 17.7 SCFM (20 - 500 NI/min)  
(1/4 - Versions 0, 1, 6 or 7 only)

60 = 0.8 - 21.2 SCFM (22 - 600 NI/min)  
(1/4 - Versions 0, 1, 6 or 7 only)

99 = 1.8 - 35.3 SCFM (50 - 1000 NI/min)  
(3/8 - Versions 0, 1, 6 or 7 only)


20 = 3.5 - 70.6 SCFM (100 - 2000 NI/min)  
(1/2 - Versions 2, 3, /8 or 9 only)

**Digital I/O**

1 = Pressure switch output PNP ± 5%

Notes:  
 \* Port size depends on flow range (1/4 or 3/8)  
<sup>1)</sup> Feedback input is needed for dual loop units.

Connector Pin Out

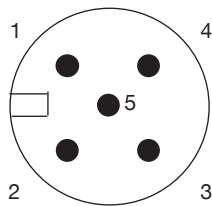


Pin	Description
1	+24 VDC Supply
2	Command Signal
3	+0 VDC Common (Supply)
	+0 VDC Common (Command Signal)*
4	Analog output (feedback)
5	Digital output (pressure switch)
Body	EMC shield

\* A 6-wire cable with separate common for the command signal is used for cable lengths over 2m to minimize the voltage drop for the command signal.

Dimensions: inches (mm)

Weight: 1.85kg (4.08lbs)

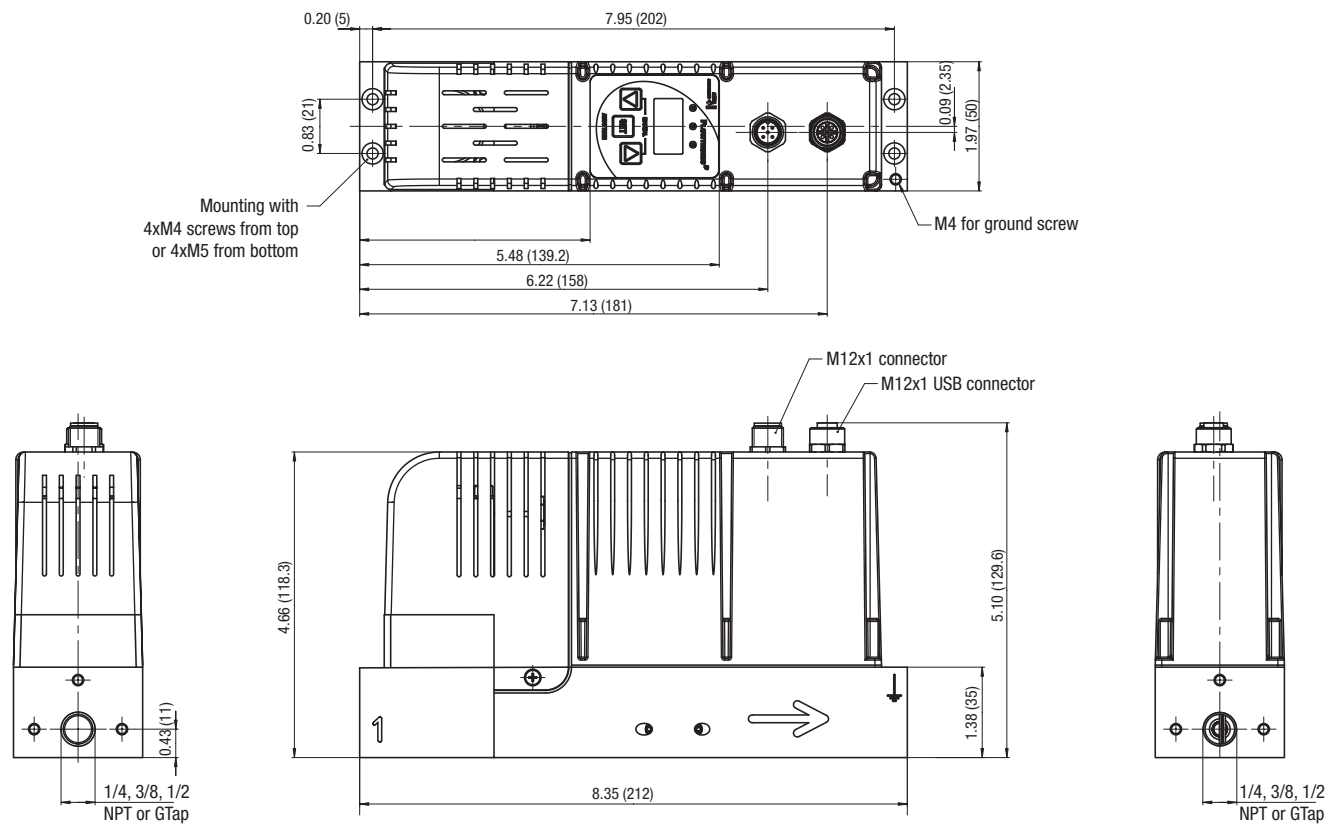

Accessories




5 Pin 12mm FEMALE Straight Field Attachable Connectors		Model number
PG 9 Cable Gland		TC05F20000000000
5 Pin 12mm FEMALE 90 DEGREE Field Attachable Connectors		
PG 9 Cable Gland		TD05F20000000000
Micro Female 5 Pole Straight 6 Wire 24 AWG, Shielded		
3 Meter		TC0503MMS000671Y
5 Meter		TC0505MMS000671Y
Micro Female 5 Pole 90 Degree 6 Wire 24 AWG Euro Color Code, Shielded		
3 Meter		TD0503MMS000671Y
5 Meter		TD0505MMS000671Y
PC Software & Cable Connector		Model number
Flowtronic <sup>®</sup> software "ASCO-FlowCom-Light" - free download at asco.com		88100895
Flowtronic <sup>®</sup> software "ASCO-FlowCom-Expert" - CD-ROM		Consult Factory
USB cable for connection of Flowtronic <sup>®</sup> to PC		88100897


## Control<sup>D</sup>

The stand-alone control device Control<sup>D</sup> is used for open-loop, closed-loop or dual-loop (cascaded) process control. It is designed to control proportional valves by regulating the current in the valve's solenoid coil. The maximum value of the solenoid coil's current is automatically determined with the auto-tune function. More complex applications can be controlled using additional analog inputs of flow, temperature, pressure, force, etc.


A serial RS232 or a mini USB interface allows communication with a PC where the included Numatics DigiCom software can be used to adapt the controller to the control loop. Three buttons and a 3-digit LED display on the device enable manual setpoint setting and display of feedback without the need for PLC control during start-up. Additional LEDs show the operating state and any error messages (e.g. low voltage, overvoltage, setpoint not reached) that may occur.

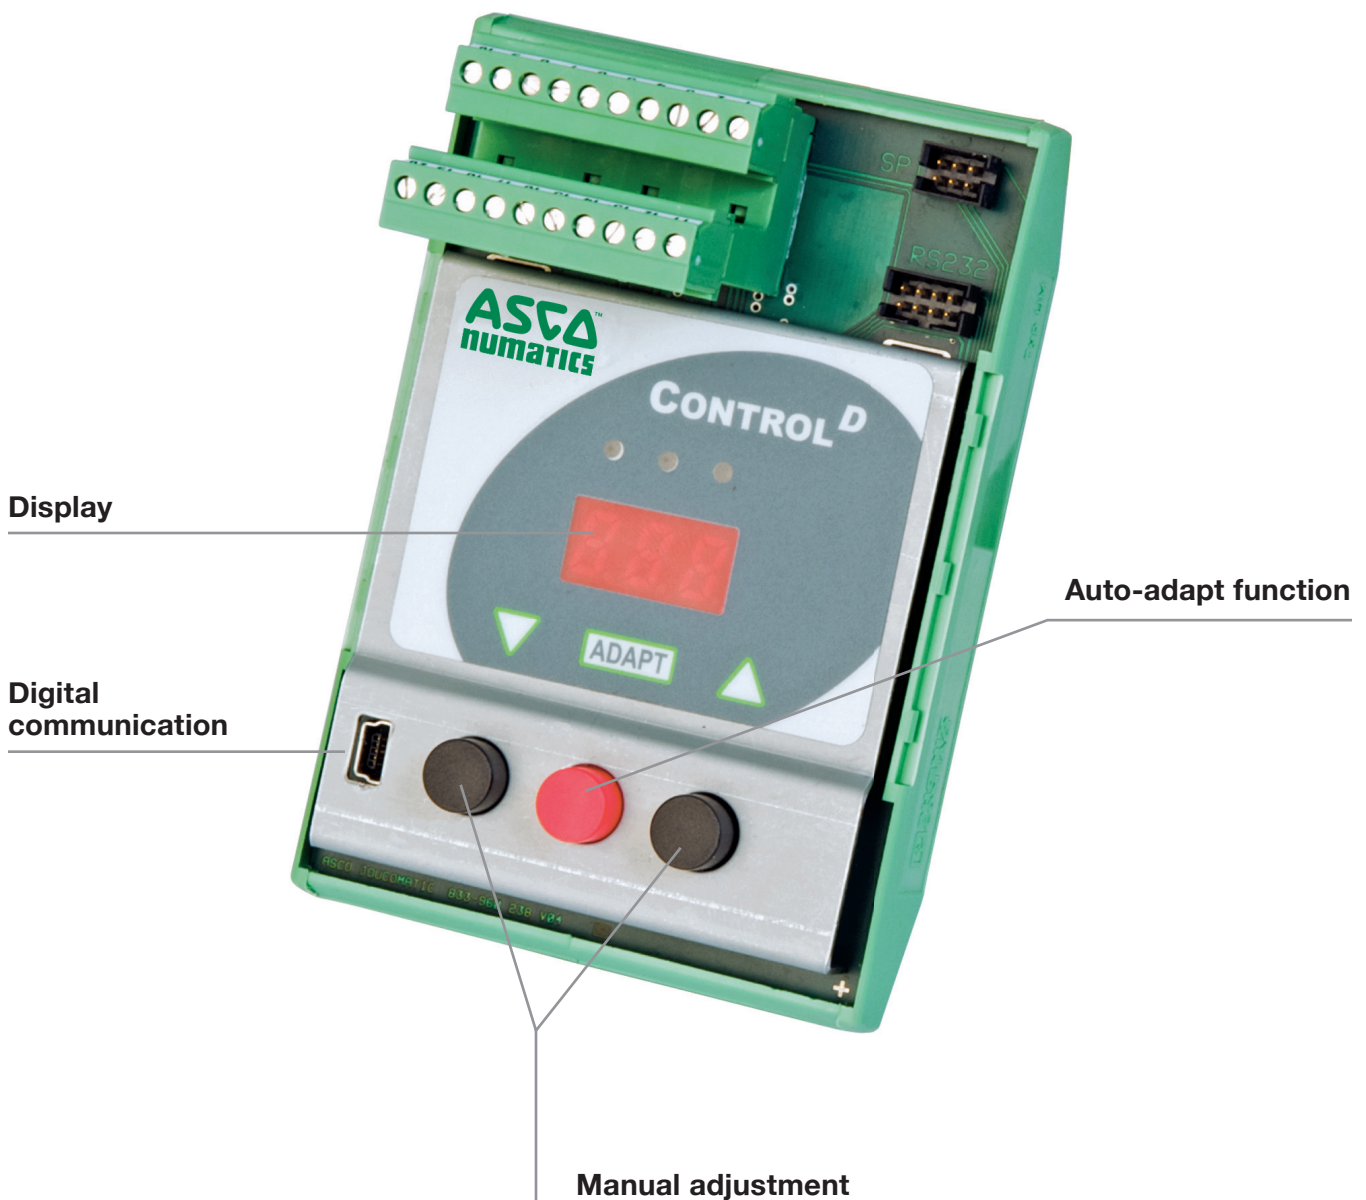


## Open-Loop Control



## Closed-Loop Control

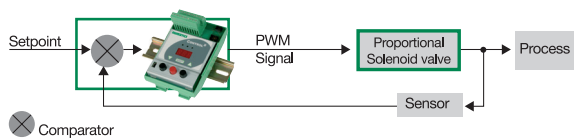

## Double-Loop (Cascaded) Control

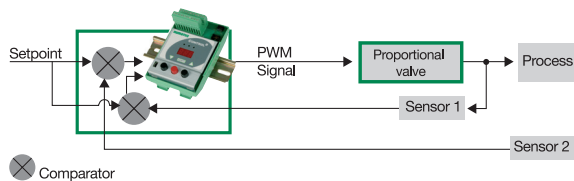

## Advantages

- Low hysteresis
- Easy change of control parameters
- Digital control
- Integrated Display
- AUTO-ADAPT button for determining max. coil current
- PC communication
- Configurable analog feedback output
- Switching output
- Scope function using DigiCom software
- USB interface
- Suitable for use with Posiflow, Preciflow and Sentronic
- Direct input for open-loop control (no measuring device required)
- Easy to duplicate control parameters

## DigiCom Software



By connecting the Control<sup>D</sup> to a PC with a USB interface, the ASCO DigiCom software that comes with the product can be used to optimally adjust the valve's control parameters to a specific application.

- The scope function allows you to log and read the system's transient response in real time.
- Control parameters can be adjusted to an application without removing the controller from service.
- Saved control parameters can be loaded at any time.

The ASCO DigiCom software offers the following features:

- Real time display of: command signal, outlet pressure, internal control parameters (e.g. P, I or D), pressure switch signal, etc.
- Parameter setting: command signal, zero offset, span, limitation of percentage of output current, ramp function, etc.
- Custom adjustment to an application
- Control of proportional devices such as Posiflow, Preciflow or proportional pressure regulator valves

## Control<sup>D</sup>

- Control device for PWM (pulse-width modulated) proportional solenoid valve control
- Designed for open-loop, closed-loop and double-loop (cascaded) control
- Suitable for the control of flow, pressure, temperature, force, etc.
- Integrated display and LEDs
- Control parameters adjustable via software (DigiCom, USB interface)
- Auto-Adapt function/button for automatic adjustment of the Control<sup>D</sup> control device to the control valve

A special feature of the Control<sup>D</sup> is the "ASCO-DigiCom" software supplied for optimum adjustment over PC. Setpoint and feedback values can be viewed at the same time. Other functions are valve diagnostics, parameter setting and maintenance.




General Valve Information	
Temperature Range	-20 °C to 50 °C (-4 °F to 122 °F)
Body	PA (polyamide)
Degree of Protection	IP20
Electrical Connection	Pluggable terminal block (0.08 – 1.5mm <sup>2</sup> )
Mounting	DIN-EN 50022 rail
Nominal voltage	24/12 VDC +/- 10%
Command signal	0 – 10 V, 0 – 20 mA, 4 – 20 mA
Current adjustment	0–2A
Pressure control	0 – 100%
Process control	0 – 100%
Serial interface	Mini USB or RS 232 (option)


Electrical Characteristics	
Supply Voltage	(U <sub>i</sub> ) 24 VDC ±10%, max. ripple 10% or 12 VDC +15% -5%, max. ripple 10%
Max. Current of Proportional Solenoid Valve	0.2A/2A
Setpoint Input	0 – 10 VDC, 0 – 20 mA, 4 – 20 mA
Sensor Input	0 – 10 VDC, 0 – 20 mA, 4 – 20 mA
Feedback Output	0 – 10 V, 0/4 – 20 mA
Ramp	ON/OFF, adjustable between 0.1 and 20 seconds
Adjustable Switching Frequency	20 to 2000 Hz

Specifications	
Description	Catalog Number
Control <sup>D</sup> control device - 12 VDC/2 A	60300117
Control <sup>D</sup> control device - 24 VDC/2 A	60300118
Control <sup>D</sup> control device - 24 VDC/200 mA	60300119


### Control<sup>D</sup> offers 3 control modes

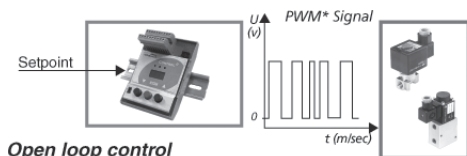


#### Open loop control



#### Closed loop control




#### Double loop control

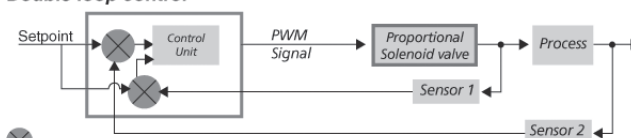


⊗ Comparator  
\* PWM : pulse-width modulated

Dimensions: mm (inches)

Weight: 0.15kg (0.33 lbs)

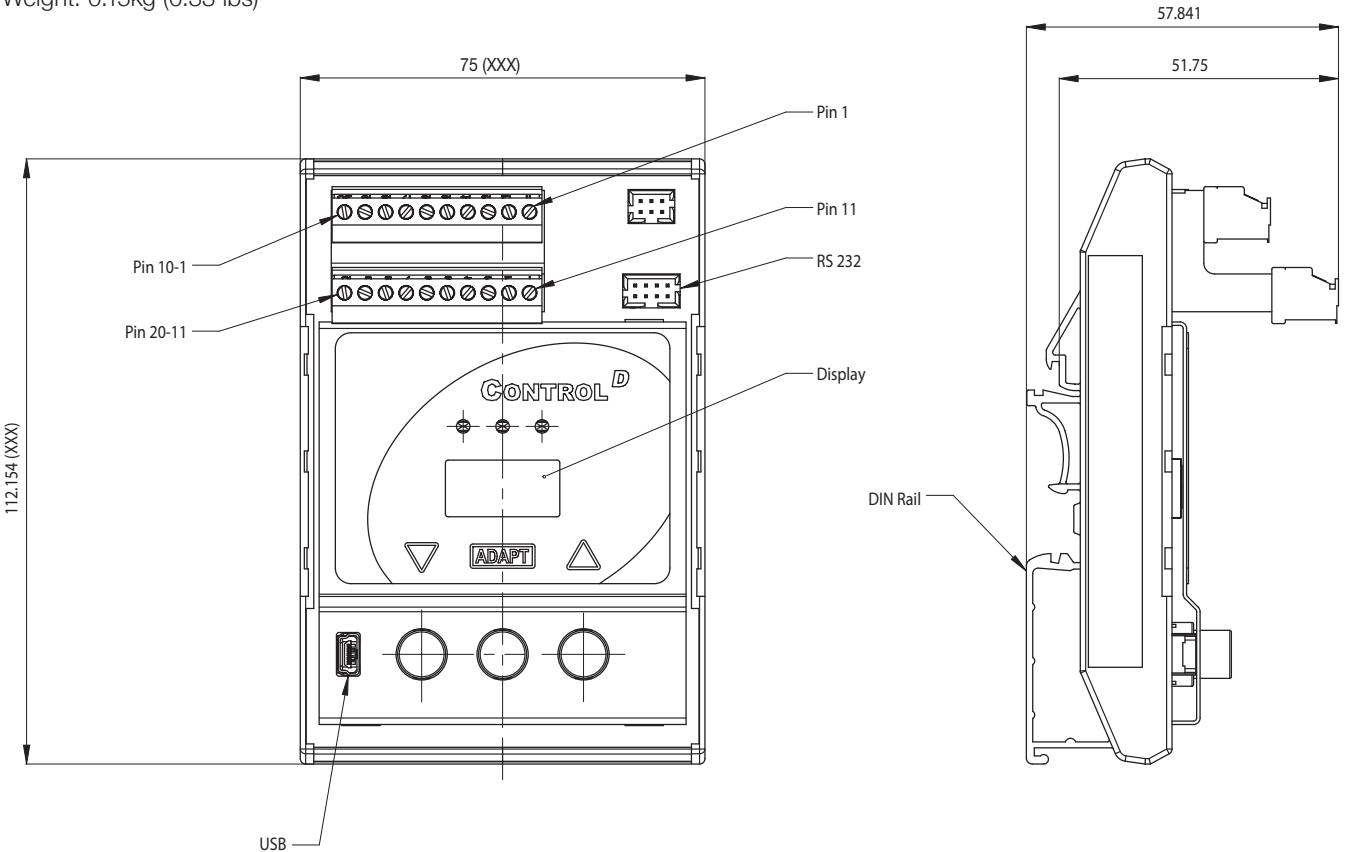

Connector Pinning

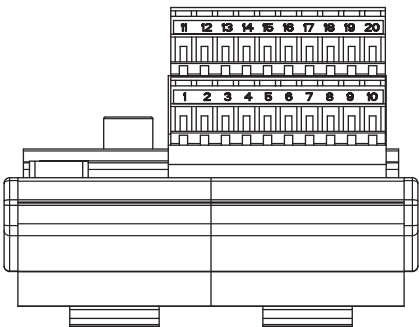

Pin	Description	Pin	Description
1	V DC IN/ + supply	11	Setpoint
2	GND IN/ ground	12	GND setpoint
3	Protective earth PE	13	Digital input
4	Frequency input	14	GND Digital input
5	Sensor supply voltage +	15	Valve/coil connection
6	Analog input 1	16	GND valve
7	GND sensor supply voltage	17	Digital output
8	Sensor supply voltage +	18	GND Digital output
9	Analog input 2	19	GND Analog output
10	GND sensor supply voltage	20	Analog output

Accessories	
Description	Catalog Number
"ASCO-DigiCom" Control <sup>®</sup> software on CD-ROM (supplied with the controller)	88100893
USB cable for Control <sup>®</sup> to PC connection (to be ordered separately)	88100894
RS 232 cable converter; 2m cable with 9-pin Sub-D (plug connector)	88100732
RS 232 cable converter; 2m cable with 9-pin Sub-D (screw connector)	833-993708







Global Contacts

Australia	(61) 2-9-451-7077	France	(33) 2-37-24-42-24	Netherlands	(31) 33-277-7911
Brazil	(55) 11-4208-1700	Germany	(49) 7237-9960	Singapore	(65) 6556-1100
Canada	(1) 519-758-2700	India	(91) 44-39197300	South Korea	(82) 2-3483-1570
China	(86) 21-3395-0000	Italy	(39) 02-356931	Spain	(34) 942-87-6100
Czech Republic	(420) 235-090-061	Japan	(81) 798-65-6361	United Kingdom	(44) 1695-713600
Dubai - UAE	(971) 4-811-8200	Mexico	(52) 55-5809-5640		