

INSTALLATION & MAINTENANCE INSTRUCTIONS

DESCRIPTION

The QB4 is a closed loop pressure regulator consisting of two solenoid valves, internal pressure transducer, and electronic controls mounted to an integrated mechanical regulator. The pressure is controlled by activating the solenoid valves, which apply pressure to the pilot of the mechanical regulator. One valve functions as inlet control, the other as exhaust. The unit output pressure is measured by a pressure transducer, which is internally mounted to sense pressure in the work port of the QB4 and provides a transduced feedback signal to the electronic control circuit. This feedback signal is compared to the command signal. Differences between the command signal and the actual pressure feedback signal causes one of the solenoid valves to open to adjust the pressure in the pilot of the booster/regulator. Pilot pressure is adjusted so that desired down stream operating pressure is achieved and maintained. Because the working pressure is sensed as opposed to pilot pressure, hysteresis in the integrated mechanical regulator is eliminated.

The output pressure is proportional to an electrical command signal. Command inputs are either a differential 0-10 VDC or 4-20 mA. The unit comes standard with an electrical monitor signal for tracking pressure which comes from the internal pressure transducer.

The uniqueness of the booster design is that it has no stamped gaskets or special molded diaphragm or seal parts. All of the parts related to normal maintenance are standard O-rings.

PNEUMATIC CONNECTIONS

CAUTION: USE ONLY THE THREAD SEALANT PROVIDED. OTHER SEALANTS SUCH AS PTFE TAPE AND PIPE DOPE CAN MIGRATE INTO THE FLUID SYSTEM CAUSING FAILURES.

1. The valve can be mounted in any position without affecting performance. Mounting brackets (ordered separately) can be used to attach valve to a panel or wall surface.
2. A typical 40 micron in-line filter is recommended on the inlet of the QB4 valve. This is available from Proportion-Air as part number FPP-4
3. A 1/4" plug is supplied with the valve. It can be used to plug the "alternate exhaust port" if the exhaust media should be captured or when the valve is used for vacuum or vacuum through positive pressure control. See Figure 1 for port location.

Before you get started, please read these warnings

- ◆ Examine the product. Ensure that you received what you ordered.
- ◆ Read this guide first before you start and save it for later use.
- ◆ You must have a good understanding of what the adjustments are on this product before using them.
- ◆ All compressed air and power should be shut off before installing, removing or performing maintenance on this product.
- ◆ Installation and use of this product should be under the supervision and control of properly qualified personnel in order to avoid the risk of injury or death.

CE CE (EMC) Compliant

Except for models having the following features: RS232, RS485, P2 Profiler and Digital Display



Standard QB4 series regulator.

SPECIFICATIONS

ELECTRICAL

SUPPLY VOLTAGE	15-24 VDC
SUPPLY CURRENT	250 mA
COMMAND SIGNAL	0-10 VDC 4-20 mA
COMMAND SIGNAL IMPEDANCE	VDC = 10 KΩ Current = 100 Ω
VOLTAGE MONITOR SIGNAL	0-10 VDC @ 20 mA max
CURRENT MONITOR SIGNAL	4-20 mA Sinking (sourcing opt)

MECHANICAL

PRESSURE RANGES	Full Vacuum - 150 psig (760 mmHg (Vac) - 10.3 Bar)
OUTPUT PRESSURE†	0-100% of range
FLOW RATE	200 SCFM @ 120 psig supply & 60 psig output (5,667 L/min @ 4.1 Bar)
PORT SIZE	1/2" NPT
Min CLOSED END VOLUME	5 in ³
FILTRATION RECOMMENDED	40 Micron
LINEARITY/HYSTERESIS	<±0.3% F.S. BFSL
ACCURACY	<±0.4% F.S.

WETTED PARTS ‡

ELASTOMERS	Buna N
MANIFOLD	Aluminum Nickel Plated
VALVES	Nickel Plated Brass or 400 Series Stainless Steel
PRESSURE TRANSDUCER	Utem 1000, Aluminum

PHYSICAL

OPERATING & MEDIA TEMPERATURE	32-158°F (0-70°C)
WEIGHT	4 lbs. (1.81 kg)
PROTECTION RATING	IP 65
HOUSING	Aluminum (Anodized)

† Pressure ranges are customer specified. Output pressures other than 100% are available. Vacuum through positive pressure units, pressure must be equal to or greater than vacuum level. Consult factory for pressure ranges below 10 psig. ‡ Others available

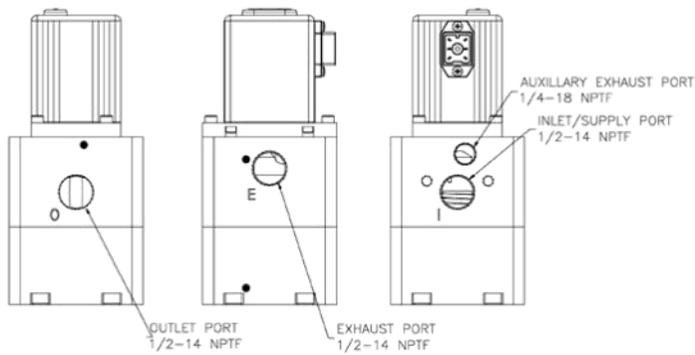


FIGURE 1

PNEUMATIC CONNECTIONS (CONTINUED)

Positive Pressure Units


1. Connect supply pressure to the “I” inlet port (Figure 1) not to exceed the rated supply pressure. (See TABLE 1)
2. Connect the outlet “O” port (Figure 1) to the device being controlled.
3. The “E” exhaust port can be plumbed to a point outside the work area, fitted with a muffler or left open to atmosphere as the application dictates.
4. Proceed with “Electrical Connections” section.

Vacuum only & Vacuum Through Positive Pressure Units

1. Connect vacuum supply to the “E” exhaust port (Figure 1). The auxiliary exhaust port must be plugged with the 1/4” NPT pipe plug provided to prevent atmospheric air from leaking in to the vacuum supply.
2. Connect supply pressure to the “I” inlet port (figure 1) not to exceed the rated supply pressure. (See TABLE 1). **Positive supply pressure is required on vacuum and vacuum through positive pressure QB4 units.** (Call Factory with Questions)
3. Connect the outlet “O” port (Figure 1) to the device being controlled.
4. Proceed with “Electrical Connections” section.

MAX. calibrated pressure:	Max. inlet pressure:
Vacuum only	5 PSIG
Vacuum up to 10 PSIG	15 PSIG
10.1 up to 30 PSIG	35 PSIG
31 up to 100 PSIG	110 PSIG
101 up to 150 PSIG	165 PSIG

DIMENSIONS FOR REFERENCE ONLY

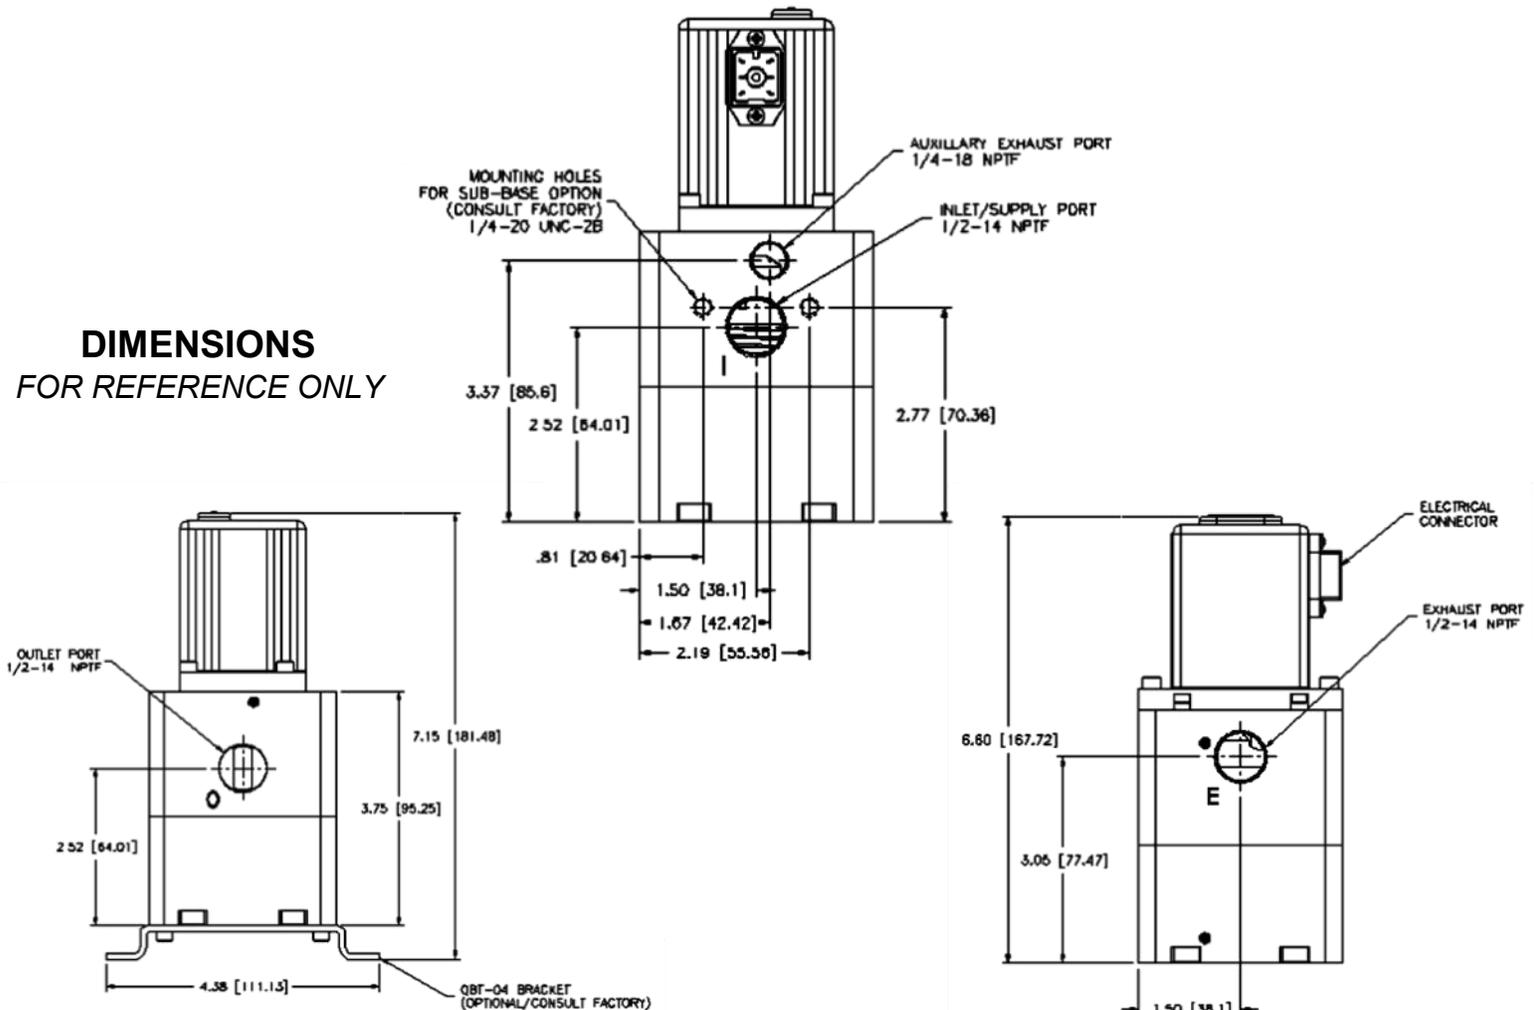


ELECTRICAL CONNECTIONS

1. Turn off all power to valve.
2. Identify the valve's command input and analog output using the calibration card included in the package and the ordering information section on the last page of this sheet.
3. Proceed to the appropriate section corresponding to the type of valve being installed.

NOTE: ALL COLOR CODES RELATE TO QB'S ORDERED FROM THE FACTORY WITH PRE-ASSEMBLED QBT-C-X CABLES


VOLTAGE & CURRENT COMMAND (E, I)

All voltage command QB4's use a differential command. If a single ended voltage will be used, tie the command return wire to DC common. Current command also uses a differential loop where the command flow is from Pin 4 to Pin 2. Some applications may require the common of the device that provides loop power for the 4-20mA command to be tied to power supply common.

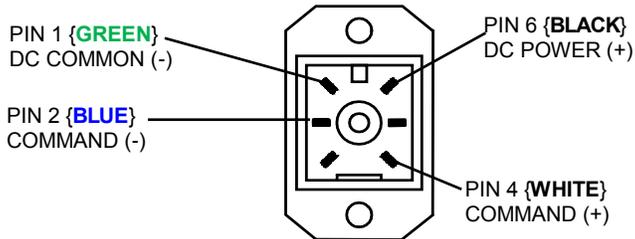


VOLTAGE MONITOR (E, K, V)

Use the following wiring diagram for QB valves with a voltage monitor output.

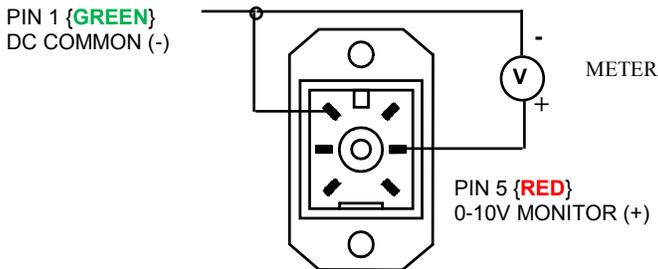


CURRENT MONITOR SINKING (C)

Use the following wiring diagram for QB valves with a current sinking monitor output.

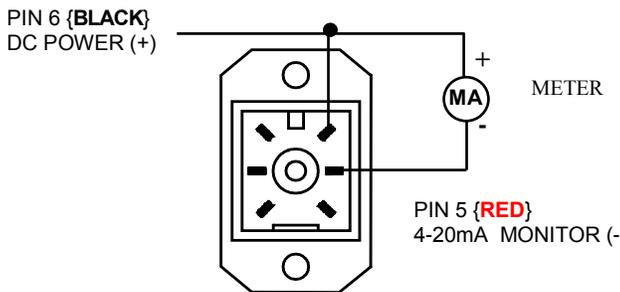

CURRENT MONITOR SOURCING (S)

Use the following wiring diagram for QB valves with a current sourcing monitor output.

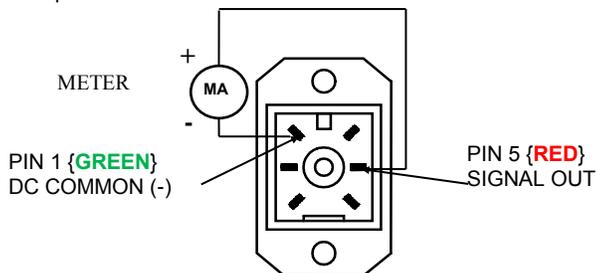

RE-CALIBRATION PROCEDURE :

All QB4 control valves come calibrated from the factory by trained personnel using precision calibration equipment. The QB4 valve is a closed-loop control valve using a precision internal electronic pressure sensor. Typical drift is less than 1% over the life of the product. If your QB4 valve appears to be out of calibration by more than 1%, it is not likely to be the QB4. Check the system for plumbing leakage and/or wiring and electronic signal levels. Verify the accuracy of your measuring equipment before re-calibrating. Consult factory if you have any questions or require assistance. If the QB4 valve needs re-calibration, use the procedure described below:

1. Wire control valve according to the section titled "Electrical Connections."
2. Connect a precision measuring gauge or transducer to the outlet port of the QB4. **NOTE: THERE MUST BE A CLOSED VOLUME OF AT LEAST 5 CU. IN BETWEEN THE VALVE OUTLET AND THE MEASURING DEVICE FOR VALVE TO BE STABLE.**
3. Plumb control valve according to section titled "Pneumatic Connections". Make sure supply pressure does not exceed the rating for the valve (see table 1).
4. On the printed circuit board, locate the two adjustment potentiometers **SPAN** and **ZERO**. (Figure 2)
5. **ONLY USE THIS STEP IF DEVICE IS COMPLETELY OUT OF CALIBRATION. IF IT IS SLIGHTLY OUT OF CALIBRATION, PROCEED TO STEP 6.** With a small screwdriver, turn both potentiometers 15 turns clockwise. Then turn them 7 turns counter clockwise. This will put the QB4 roughly at mid scale
6. Set the electrical command input to **MAXIMUM** value.
7. Adjust the **SPAN** potentiometer until **MAXIMUM** desired pressure or vacuum is reached (clockwise to increase pressure).
8. Set the electrical command input to 10 percent of full value (1VDC for 0-10VDC unit or 5.6mA for 4-20mA unit).
9. Adjust the **ZERO** potentiometer until 10 percent of maximum desired pressure or vacuum is reached. (clockwise increases pressure).
10. If at any time during the calibration procedure the control valve oscillates or becomes unstable for more than one second, turn the hysteresis potentiometer clockwise until the oscillation stops, then turn it one more complete turn (same direction).
11. The **ZERO** and **SPAN** potentiometers interact slightly. Repeat steps 5-10 until no error exists.

Verify unit shuts off by going to zero command. Check linearity by going to at least six pressure points throughout the full range

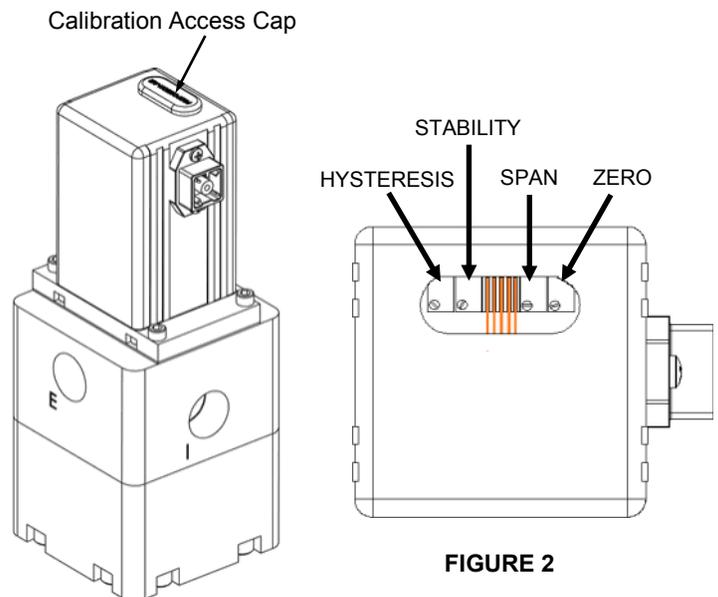


FIGURE 2

